SIEMENS

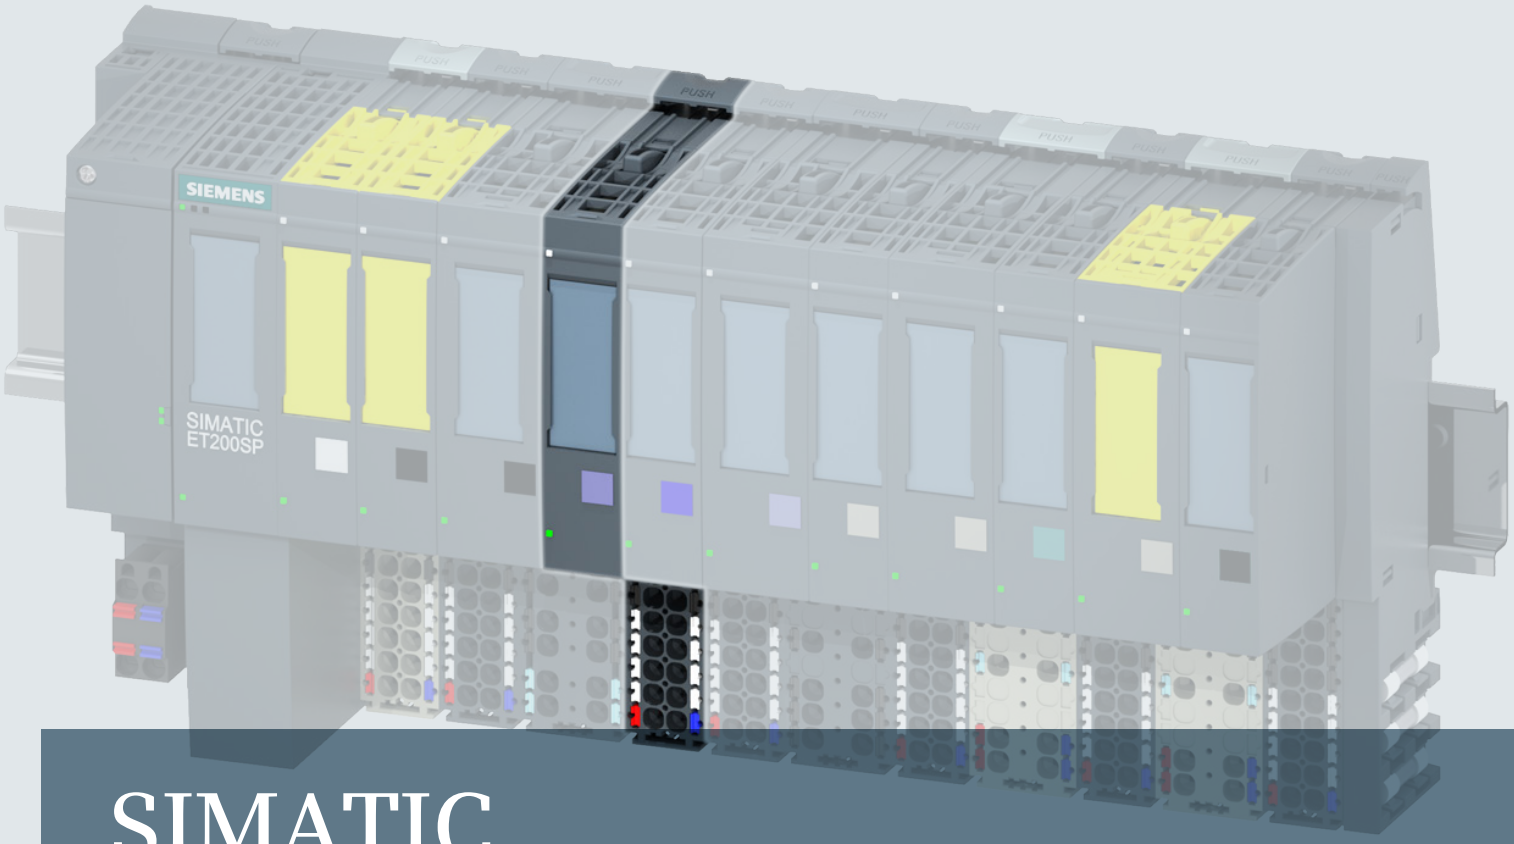

SIMATIC

ET 200SP

Analog input module AI 4xRTD/TC 2-/3-/4-wire HF (6ES7134-6JD00-0CA1)

Manual

Edition 02/2014

Answers for industry.

SIEMENS

SIMATIC

ET 200SP
Analog input module
AI 4xRTD/TC 2-/3-/4-wire HF
(6ES7134-6JD00-0CA1)

Manual

Preface

Guide to documentation 1

Product overview 2

Wiring 3

Parameters/address space 4

Interrupts/diagnostics alarms 5

Technical specifications 6

Parameter data record A

Representation of analog values B

02/2014

A5E03573289-AD

Legal information

Warning notice system

This manual contains notices you have to observe in order to ensure your personal safety, as well as to prevent damage to property. The notices referring to your personal safety are highlighted in the manual by a safety alert symbol, notices referring only to property damage have no safety alert symbol. These notices shown below are graded according to the degree of danger.

⚠
indicates that death or severe personal injury **will** result if proper precautions are not taken.

⚠WARNING
indicates that death or severe personal injury **may** result if proper precautions are not taken.

⚠CAUTION
indicates that minor personal injury can result if proper precautions are not taken.

NOTICE
indicates that property damage can result if proper precautions are not taken.

If more than one degree of danger is present, the warning notice representing the highest degree of danger will be used. A notice warning of injury to persons with a safety alert symbol may also include a warning relating to property damage.

Qualified Personnel

The product/system described in this documentation may be operated only by **personnel qualified** for the specific task in accordance with the relevant documentation, in particular its warning notices and safety instructions. Qualified personnel are those who, based on their training and experience, are capable of identifying risks and avoiding potential hazards when working with these products/systems.

Proper use of Siemens products

Note the following:

⚠WARNING
Siemens products may only be used for the applications described in the catalog and in the relevant technical documentation. If products and components from other manufacturers are used, these must be recommended or approved by Siemens. Proper transport, storage, installation, assembly, commissioning, operation and maintenance are required to ensure that the products operate safely and without any problems. The permissible ambient conditions must be complied with. The information in the relevant documentation must be observed.

Trademarks

All names identified by ® are registered trademarks of Siemens AG. The remaining trademarks in this publication may be trademarks whose use by third parties for their own purposes could violate the rights of the owner.

Disclaimer of Liability

We have reviewed the contents of this publication to ensure consistency with the hardware and software described. Since variance cannot be precluded entirely, we cannot guarantee full consistency. However, the information in this publication is reviewed regularly and any necessary corrections are included in subsequent editions.

Siemens AG
Industry Sector
Postfach 48 48
90026 NÜRNBERG
GERMANY

A5E03573289-AD
℗ 02/2014 Subject to change

Copyright © Siemens AG 2014.
All rights reserved

Preface

Purpose of the documentation

This device manual complements the system manual ET 200SP distributed I/O system (http://support.automation.siemens.com/WW/view/en/58649293). Functions that generally relate to the system are described in this manual.

The information provided in this manual and in the system/function manuals supports you in commissioning the system.

Conventions

Please also observe notes marked as follows:

Note

A note contains important information on the product described in the documentation, on the handling of the product and on the section of the documentation to which particular attention should be paid.

Security information

Siemens provides products and solutions with industrial security functions that support the secure operation of plants, solutions, machines, equipment and/or networks. They are important components in a holistic industrial security concept. With this in mind, Siemens' products and solutions undergo continuous development. Siemens recommends strongly that you regularly check for product updates.

For the secure operation of Siemens products and solutions, it is necessary to take suitable preventive action (e.g. cell protection concept) and integrate each component into a holistic, state-of-the-art industrial security concept. Third-party products that may be in use should also be considered. You can find more information about industrial security on the Internet (http://www.siemens.com/industrialsecurity).

To stay informed about product updates as they occur, sign up for a product-specific newsletter. You can find more information on the Internet (http://support.automation.siemens.com).

Table of contents

Preface **3**

1 Guide to documentation **5**

2 Product overview **7**

2.1 Properties 7

3 Wiring **10**

3.1 Pin assignment 10

3.2 Schematic circuit diagram 12

4 Parameters/address space **13**

4.1 Measurement types and measuring ranges 13

4.2 Parameters 18

4.3 Explanation of parameters 23

4.4 Scalable measuring range 28

4.4.1 Configuration 30

4.4.2 Evaluating data record 235 31

4.5 Address space 34

5 Interrupts/diagnostics alarms **35**

5.1 Status and error display 35

5.2 Interrupts 37

5.3 Diagnostics alarms 38

6 Technical specifications **40**

6.1 Technical specifications 40

A Parameter data record **47**

A.1 Dependencies when configuring with GSD file 47

A.2 Parameter assignment and structure of parameter data record 52

A.3 Switchable wire break check 61

B Representation of analog values **62**

B.1 Representation of input ranges 63

B.2 Representation of analog values in voltage measuring ranges 64

B.3 Representation of analog values for resistance-type sensors 65

B.4 Representation of analog values for thermal resistors 66

B.5 Representation of analog values for thermocouples 69

Guide to documentation

1

Introduction

This modular documentation of the SIMATIC products covers diverse topics concerning your automation system.

The complete documentation for the ET 200SP distributed I/O system consists of a system manual, function manuals and product manuals.

The STEP 7 information system (online help) also supports you during the configuration and programming of your automation system.

Overview of documentation for analog input module AI 4×RTD/TC 2-/3-/4-wire HF

The following table shows additional documentation that you need when using the AI 4×RTD/TC 2-/3-/4-wire HF analog input module.

Table 1- 1 Documentation for analog input module AI 4×RTD/TC 2-/3-/4-wire HF

Topic	Documentation	Key contents
System description	ET 200SP distributed I/O system (http://support.automation.siemens.com/WW/view/en/58649293) system manual	• Application planning • Installation • Wiring • Commissioning
Designing interference-free controllers	Designing interference-free controllers (http://support.automation.siemens.com/WW/view/en/59193566) function manual	• Basics • Electromagnetic compatibility • Lightning protection
Analog value processing	Function manual Analog value processing (http://support.automation.siemens.com/WW/view/en/67989094)	• Basics of analog technology (wiring, processing, installation technology) • Description/explanation of meaning, e.g., conversion and cycle times, basic error limits, operational limits
System diagnostics	Function manual System diagnostics (http://support.automation.siemens.com/WW/view/en/59192926)	• Overview • Diagnostics evaluation of hardware/software

Topic	Documentation	Key contents
BaseUnits	Manual ET 200SP BaseUnits (http://support.automation.siemens.com/WW/view/en/59753521)	Technical specifications
Amendments and special features of the ET 200SP distributed I/O system	Product information on documentation of the ET 200SP distributed I/O system (http://support.automation.siemens.com/WW/view/en/73021864)	Current information not yet documented in the system manuals, function manuals, or product manuals.

SIMATIC manuals

All current manuals for SIMATIC products are available to download free of charge on the Internet (http://www.siemens.com/simatic-tech-doku-portal).

Product overview

2

2.1 Properties

Article number

6ES7134-6JD00-0CA1

View of the module

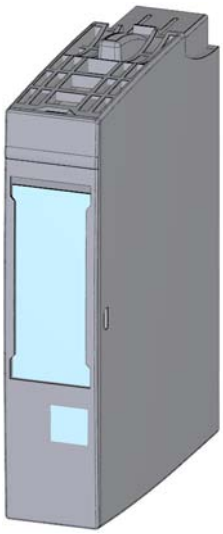

Figure 2-1 View of the module AI 4×RTD/TC 2-/3-/4-wire HF

Properties

The module has the following technical properties:

- Analog input module with 4 inputs
- Resolution: Up to 16 bits including sign
- Voltage measurement type can be set per channel
- Resistor measurement type can be set per channel
- Thermal resistor (RTD) measurement type can be set per channel
- Thermocouple (TC) measurement type can be set per channel
- Configurable diagnostics for each channel
- Hardware interrupt on limit violation can be set per channel (two high and two low limits per channel)
- Automatic compensation of the line resistance with 3-wire connection

The module supports the following functions:

- Firmware update
- I&M identification data
- Reconfiguration in RUN

Table 2- 1 Version dependencies of other module functions

Function	Product version of the module as of	Firmware version of the module as of
Calibration in runtime	1	as of V2.00.00
Value status (PROFINET IO only)	1	as of V1.01.00
Scalable measuring range	1	as of V2.00.00
Selectable conductor resistance for 2-wire connection	1	as of V2.00.00
Switchable wire break check	1	as of V2.00.00

You can configure the module with STEP 7 (TIA Portal) and with a GSD file.

Accessories

The following accessories must be ordered separately:

- Labeling strips
- Color identification labels
- Reference identification label
- Shield connection

See also

You can find more information on accessories in the ET 200SP distributed I/O system (http://support.automation.siemens.com/WW/view/en/58649293) system manual.

Wiring

3

3.1 Pin assignment

General pin assignment

Table 3- 1 Pin assignment for AI 4xRTD/TC 2-/3-/4-wire HF

Pin assignment for AI 4×RTD/TC 2-/3-/4-wire HF (6ES7134-6JD00-0CA1)						
Terminal	**Assignment**	**Terminal**	**Assignment**	**Notes**	**BaseUnits**[1]	**Color identification label**
1	M_0+	**2**	M_1+	• M_n+: Measuring line positive, channel n • M_n-: Measuring line negative, channel n • I_{Cn}+: Constant current line positive, channel n • I_{Cn}-: Constant current line negative, channel n	A0 A1	---
3	M_2+	**4**	M_3+			
5	M_0-	**6**	M_1-			
7	M_2-	**8**	M_3-			
9	I_{C0}+	**10**	I_{C1}+			
11	I_{C2}+	**12**	I_{C3}+			
13	I_{C0}-	**14**	I_{C1}-			
15	I_{C2}-	**16**	I_{C3}-			
L+	24 VDC	**M**	M			

RTD 2-wire connection	RTD 3-wire connection	RTD 4-wire connection	TC
			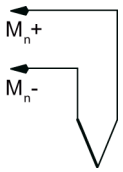

[1] Usable BaseUnit types, can be identified by the last two digits of the article number. See also "ET 200SP distributed I/O system" system manual.

Note

The first BaseUnit of a station must be a light-colored BaseUnit. Keep this in mind also during the configuration.

See also

ET 200SP distributed I/O system
(http://support.automation.siemens.com/WW/view/en/58649293)

3.2 Schematic circuit diagram

Schematic circuit diagram

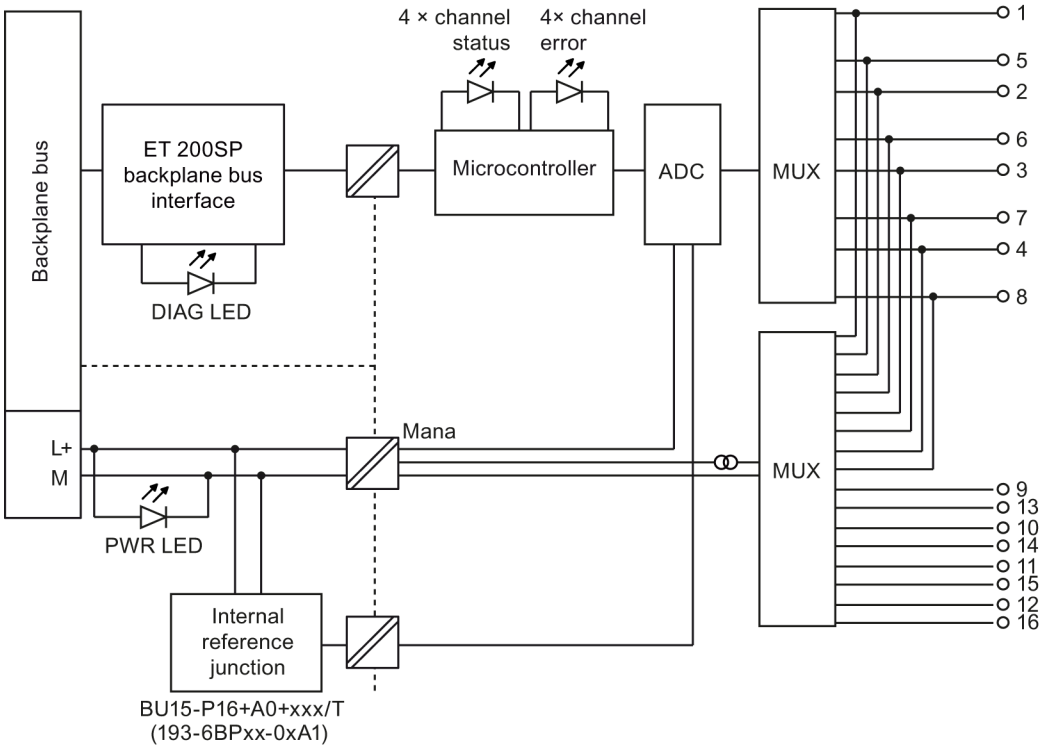

Figure 3-1 Schematic circuit diagram AI 4×RTD/TC 2-/3-/4-wire HF

Parameters/address space

4

4.1 Measurement types and measuring ranges

The following table describes the measuring range and the temperature coefficients you can configure for each measurement type:

Table 4- 1 Measurement types and measuring ranges

Measurement type	Measuring range	Temperature coefficient
Deactivated	–	–
Resistor (2-, 3-, 4-wire connection)	150 Ω / 300 Ω / 600 Ω / 3 kΩ / 6 kΩ	–
Resistor (2-wire connection)	PTC	–
Thermal resistor RTD (3-wire connection)	Climatic / Standard Cu 10	Cu 0.00427[1]
Thermal resistor RTD (2, 3, 4-wire connection)	Climatic / Standard Pt 100 Pt 200 Pt 500 Pt 1000	Pt 0.00385 / Pt 0.003916 / Pt 0.003902 / Pt 0.00392 / Pt 0.00385055
	Climatic / Standard Ni 100 Ni 120 Ni 200 Ni 500 Ni 1000	Ni 0.00618 / Ni 0.00672
	Climatic[2] / Standard[2] Ni 1000	Ni 0.005
Thermocouple (TC)	Type E, N, J, K, L, S, R, B, T, C, U, TXK (acc. to GOST)	
Voltage	±50 mV / ±80 mV / ±250 mV / ±1 V	

1 The preset temperature coefficients are valid for Europe.

2 For sensors LG-Ni 1000 from Siemens Building Ltd (Landis & Stäfa).

Special features when using Cu10 sensors

- Choose "Thermal resistor (3-wire connection)" and "Cu10" in the parameter assignment.
- Wire the Cu10 sensor into the 3-wire connection technology.
- During operation, automatic, internal compensation of the line resistance of the missing measuring line takes place.

Note

To ensure optimum line compensation with Cu10, please observe the following:

- An accurate measured value is only attained if the cable resistance of the positive constant current line to the Cu10 sensor and the cable resistance of the negative measuring line are identical in value.
- Recommendation: Keep the measuring line as short as possible.
- Different resistance values may also occur due to the connection method used.

Special features when using PTC resistors

PTCs are suitable for monitoring temperature and/or as thermal protection devices of complex drives or transformer windings.

- Choose "Thermal resistor (2-wire)" and "PTC" in the parameter assignment.
- Connect the PTC to the 2-wire connection technology.
- Use the PTC resistors, type A (PTC thermistor) in accordance with DIN/VDE 0660, part 302.
- If "Underflow" diagnostic is enabled, a "Low limit violated" diagnostic is generated for resistance values < 18 Ω, indicating a short-circuit.
- Sensor data for the PTC resistor:

Table 4- 2 Using PTC resistors

Property	Technical specifications	Comment
Switching points	**Behavior with rising temperature**	
	< 550 Ω	**Normal range:** • SIMATIC S7: Bit 0 = "0", Bit 2 = "0" (in the PII)
	550 Ω to 1650 Ω	**Prewarning range:** • SIMATIC S7: Bit 0 = "0", Bit 2 = "1" (in the PII)
	> 1650 Ω	**Response range:** • SIMATIC S7: Bit 0 = "1", Bit 2 = "0" (in the PII)
	Behavior with falling temperature	
	> 750 Ω	**Response range:** • SIMATIC S7: Bit 0 = "1", Bit 2 = "0" (in the PII)
	750 Ω to 540 Ω	**Prewarning range:** • SIMATIC S7: Bit 0 = "0", Bit 2 = "1" (in the PII)
	< 540 Ω	**Normal range:** • SIMATIC S7: Bit 0 = "0", Bit 2 = "0" (in the PII)
	Reaction to short-circuit	
	< 18 Ω	• SIMATIC S7: Bit 7 (IB x+1) = "1", Bit 0 = "0" and Bit 2 = "0"
(RRT-5) °C (RRT+5) °C (RRT+15) °C Measuring voltage/ voltage at the PTC	Max. 550 Ω min. 1330 Ω min. 4000 Ω Max. 7.5 V[1]	TNF = Rated response temperature of the sensor (according to DIN/VDE 0660)

[1] Below 23 kΩ

Assignment in the process image input (PII) with SIMATIC S7

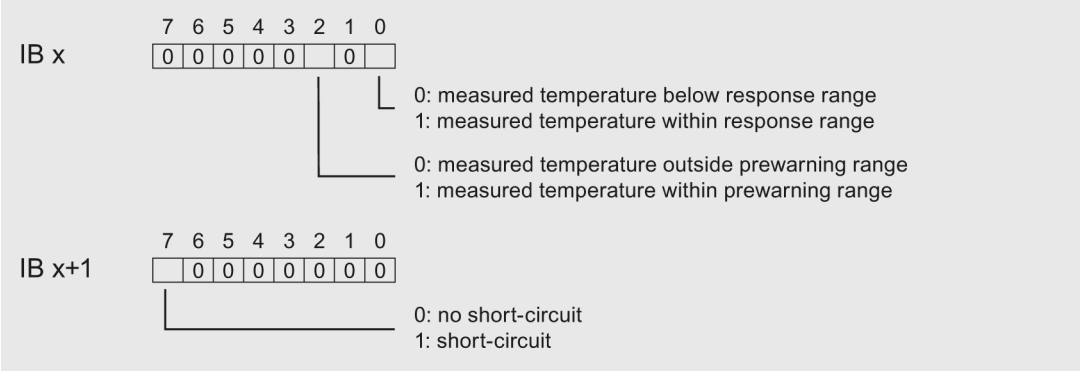
7 6 5 4 3 2 1 0
IB x
0 0 0 0 0 0
0: measured temperature below response range
1: measured temperature within response range
0: measured temperature outside prewarning range
1: measured temperature within prewarning range
7 6 5 4 3 2 1 0
IB x+1
0 0 0 0 0 0 0
0: no short-circuit
1: short-circuit

Figure 4-1 Assignment in the process image input (PII)

Notes on programming

- Bits 0+2 are relevant for evaluation in the process image input. You can monitor, for example, the temperature of a motor using bits 0+2.
- Bits 0+2 in the process image input cannot be saved. During parameter assignment, take into consideration that a motor, for example, starts up in a controlled manner (via an acknowledgment).
- Bits 0+2 can never be set at the same time; they are set one after the other.

NOTICE
No measurement is possible in the following cases: • When I/O modules are pulled out • When supply voltage to the I/O module fails • When there is a wire break or short-circuit in the measuring lines Therefore, always evaluate the diagnostics entries of the AI 4×RTD/TC 2-/3-/4-wire HF for safety reasons.

Example

The diagram shows the temperature curve and the associated switching points.

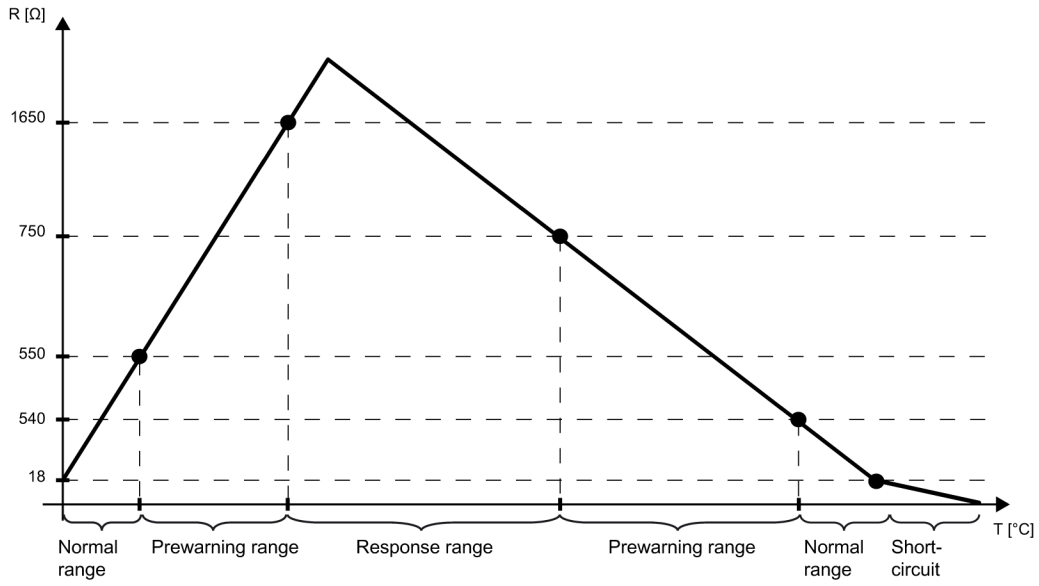

Figure 4-2 Temperature curve with prewarning range

See also

Technical specifications (Page 40)

4.2 Parameters

Parameters of the AI 4xRTD/TC 2-/3-/4-wire HF

The following table lists the configurable parameters. The effective range of the configurable parameters depends on the type of configuration. The following configurations are possible:

- Distributed operation on PROFINET IO in an ET 200SP system
- Distributed operation on PROFIBUS DP in an ET 200SP system

When assigning parameters in the user program, use the WRREC instruction to transfer the parameters to the module by means of data records, see section Parameter assignment and structure of parameter data record (Page 52). The following parameter settings are possible:

Table 4- 3 Configurable parameters and their defaults (GSD file)

Parameter	Value range	Default	Reconfiguration in RUN	Scope with configuration software, e.g., STEP 7 (TIA Portal)	
				GSD file PROFINET IO	GSD file PROFIBUS DP
Diagnostics: Missing supply voltage L+	• Disable • Enable	Disable	Yes	Channel	Channel [1]
Diagnostics: Reference junction	• Disable • Enable	Disable	Yes	Channel	Module
Diagnostics: Overflow	• Disable • Enable	Disable	Yes	Channel	Module
Diagnostics: Underflow	• Disable • Enable	Disable	Yes	Channel	
Diagnostics: Wire break	• Disable • Enable	Disable	Yes	Channel	Channel

Parameter	Value range	Default	Reconfiguration in RUN	Scope with configuration software, e.g., STEP 7 (TIA Portal)	
				GSD file PROFINET IO	GSD file PROFIBUS DP
Type/range of measurement	• Deactivated	Thermal resistor (4-wire connection) Pt 100 standard range	Yes	Channel	Channel
	• Voltage ±50 mV • Voltage ±80 mV • Voltage ±250 mV • Voltage ±1 V				
	Resistor (2-, 3-, 4-wire connection) • 150 Ω • 300 Ω • 600 Ω • 3 kΩ • 6 kΩ				
Type/range of measurement	Resistor (2-wire connection) PTC	Thermal resistor (4-wire connection) Pt 100 standard range	Yes	Channel	Channel
Type/range of measurement	Thermal resistor (2, 3, 4-wire connection) • Pt 100 climatic range • Pt 200 climatic range • Pt 500 climatic range • Pt 1000 climatic range	Thermal resistor (4-wire connection) Pt 100 standard range	Yes	Channel	Channel
	Thermal resistor (2, 3, 4-wire connection) • Pt 100 standard range • Pt 200 standard range • Pt 500 standard range • Pt 1000 standard range				

Parameter	Value range	Default	Reconfiguration in RUN	Scope with configuration software, e.g., STEP 7 (TIA Portal)	
				GSD file PROFINET IO	GSD file PROFIBUS DP
Type/range of measurement	Thermal resistor (2, 3, 4-wire connection) • Ni 100 climatic range • Ni 120 climatic range • Ni 200 climatic range • Ni 500 climatic range • Ni 1000 climatic range	Thermal resistor (4-wire connection) Pt 100 standard range	Yes	Channel	Channel
	Thermal resistor (2, 3, 4-wire connection) • Ni 100 standard range • Ni 120 standard range • Ni 200 standard range • Ni 500 standard range • Ni 1000 standard range				
Type/range of measurement	Thermal resistor (2, 3, 4-wire connection) • LG Ni 1000 climatic range	Thermal resistor (4-wire connection) Pt 100 standard range	Yes	Channel	Channel
	Thermal resistor (2, 3, 4-wire connection) • LG Ni 1000 standard range				
	Thermal resistor (3-wire connection) • Cu 10 climatic range • Cu 10 standard range				
Type/range of measurement	Thermocouple • Type B (PtRh-PtRh) • Type N (NiCrSi-NiSi) • Type E (NiCr-CuNi) • Type R (PtRh-Pt) • Type S (PtRh-Pt) • Type J (Fe-CuNi) • Type L (Fe-CuNi) • Type T (Cu-CuNi) • Type K (NiCr-NiAl) • Type U (Cu-CuNi) • Type C (WRe-WRe) • Type TXK	Thermal resistor (4-wire connection) Pt 100 standard range	Yes	Channel	Channel

Parameter	Value range	Default	Reconfiguration in RUN	Scope with configuration software, e.g., STEP 7 (TIA Portal)	
				GSD file PROFINET IO	GSD file PROFIBUS DP
Temperature coefficient	• Pt 0.00385055 • Pt 0.003916 • Pt 0.003902 • Pt 0.00392 • Pt 0.00385 • Ni 0.00618 • Ni 0.00672 • LG-Ni 0.005 • Cu 0.00427	Pt 0.00385055	Yes	Channel	Channel
Temperature unit	• Degrees Celsius • Degrees Fahrenheit • Kelvin	Degrees Celsius	Yes	Channel	Module
Reference junction [4]	• No reference channel mode • Reference channel of the module • Internal reference junction • Reference channel of group 0 to 3 • Fixed reference temperature	No reference channel mode	Yes	Channel	Channel
Smoothing	• None • Weak • Medium • Strong	None	Yes	Channel	Channel
Interference frequency suppression [3]	• 60 Hz • 50 Hz[2] • 16.6 Hz	50 Hz	Yes	Channel	Channel
Scalable measuring range	• Disable • Enable	Disable	Yes	Channel	-
Measuring range resolution	• 2 decimal places • 3 decimal places	2 decimal places	Yes	Channel	-
Measuring range center	• Value within the nominal range of the measuring range	0	Yes	Channel	-
Conductor resistance [5]	0 to 50000 mΩ	0	Yes	Channel	-

Parameter	Value range	Default	Reconfiguration in RUN	Scope with configuration software, e.g., STEP 7 (TIA Portal)	
				GSD file PROFINET IO	GSD file PROFIBUS DP
Hardware interrupt high limit 1 [3]	• Disable • Enable	Disable	Yes	Channel	-
High limit 1 [3]	• Value	8500	Yes	Channel	-
Hardware interrupt low limit 1 [3]	• Disable • Enable	Disable	Yes	Channel	-
Low limit 1 [3]	• Value	-2000	Yes	Channel	-
Hardware interrupt high limit 2 [3]	• Disable • Enable	Disable	Yes	Channel	-
High limit 2 [3]	• Value	8500	Yes	Channel	-
Hardware interrupt low limit 2 [3]	• Disable • Enable	Disable	Yes	Channel	-
Low limit 2 [3]	• Value	-2000	Yes	Channel	-
Potential group	• Use potential group of the left module • Enable new potential group	Use potential group of the left module	No	Module	Module

1 Diagnostics: Missing supply voltage L+: Detection per module or alarm per channel

2 Interference frequency suppression: Interfering signals at 400 Hz are automatically included in the filtering at 50 Hz.

3 Due to the limited number of parameters at a maximum of 244 bytes per ET 200SP station with a PROFIBUS GSD configuration, the configuration options are restricted. If required, you can still assign these parameters using data record 128 as described in the "GSD file PROFINET IO" column (see table above). The parameter length of the I/O module is 24 bytes.

4 Only for configuration with PROFIBUS GSD file: The set reference junction is used with the additional parameter "Kx Reference junction activated" in the case of "Enable". In the case of "Disable", "No reference channel mode" is used for RTD and "Fixed reference temperature" is used for TC.

5 For 2-wire connection only

Note

Unused channels

"Deactivate" unused channels in the parameter assignment to improve the cycle time of the module.

A deactivated channel always returns the value $7FFF_H$.

4.3 Explanation of parameters

Diagnostics: Missing supply voltage L+

Enabling of the diagnostics for missing or insufficient supply voltage L+.

Diagnostics: Reference junction

Enabling of the reference junction diagnostics if the reference temperature of the reference junction needs to be determined for the TC channel being operated.

Reference junction using the PROFINET GSD file

A BaseUnit with an internal temperature sensor (BU..T), the reference channel of group 0, 1, 2, 3, or channel 0 of the I/O module can be used as reference junction for the TC measurement, if this has the parameter setting "Thermal resistor Pt100 climatic range Degrees Celsius".

A possible parameter assignment is represented below:

Table 4- 4 RTD channel

Setting	Description
No reference channel mode	The temperature value at channel 0 can be used as a reference value for the entire module.
Reference channel of group 0, 1, 2, 3	The channel acts as a **transmitter** for the reference junction temperature of a group. The distribution is performed via the interface module.

Table 4- 5 TC channel

Setting	Description
Reference channel of the module	The corresponding TC channel uses channel 0 of the same module as the reference junction temperature. This must be configured as "Thermal resistor Pt 100 climatic range Degrees Celsius" and "No reference channel mode"; otherwise, Diagnostics: Reference junction is triggered.
Internal reference junction	The reference junction temperature is read by an internal temperature sensor on the BaseUnit. Diagnostics: Reference junction is triggered if there is an incorrect BaseUnit type.
Reference channel of group 0, 1, 2, 3	The channel acts as a **receiver** for the reference junction temperature of a group.
Fixed reference temperature	The reference temperature of the thermocouple is set to 0 °C. As a result, no temperature compensation is performed.

Note

Shared Device and "Reference channel of group 0, 1, 2, 3"

If the transmitter and receiver for the reference junction temperature of a group are assigned to different IO controllers, then both IO controllers must be performing data exchange with the IO device to ensure error-free operation of the temperature compensation.

Reference junction using the PROFIBUS GSD file

A BaseUnit with an internal temperature sensor (BU..T), the reference channel of group 0, 1, 2, 3, or channel 0 of the I/O module can be used as reference junction for the TC measurement, if this has the parameter setting "Thermal resistor Pt100 climatic range Degrees Celsius".

The set temperature unit (e.g. Degrees Celsius) is valid for the entire module with temperature compensation "Reference channel of the module" and "Reference channel of group 0, 1, 2, 3".

Table 4- 6 **RTD channel**

Setting	Description
No reference channel mode	The temperature value at channel 0 can be used as a reference value for the entire module.
Reference channel of group 0, 1, 2, 3	The channel acts as a **transmitter** for the reference junction temperature of a group. The distribution is performed via the interface module.

Setting	Description
Channel x Reference junction activated	• Disable: Channel x is configured with the setting "No reference channel mode". • Enable: Channel x is configured with the setting selected above.

Table 4- 7 **TC channel**

Setting	Description
Reference channel of the module	The corresponding TC channel uses channel 0 of the same module as the reference junction temperature. This must be configured as "Thermal resistor Pt 100 climatic range Degrees Celsius" and "No reference channel mode"; otherwise, Diagnostics: Reference junction is triggered.
Internal reference junction	The reference junction temperature is read by an internal temperature sensor on the BaseUnit. Diagnostics: Reference junction is triggered if there is an incorrect BaseUnit type.

Setting	Description
Reference channel of group 0, 1, 2, 3	The channel acts as a **receiver** for the reference junction temperature of a group.
Fixed reference temperature	The reference temperature of the thermocouple is set to 0 °C. As a result, no temperature compensation is performed.

Setting	Description
Channel x Reference junction activated	• Disable: Channel x is configured with the setting "Fixed reference temperature". • Enable: Channel x is configured with the setting selected above.

Diagnostics: Overflow

Enabling of the diagnostics when the measured value exceeds the overrange.

Diagnostics: Underflow

Enabling of the diagnostics if the measured value falls below the underrange.

Diagnostics: Wire break

Enabling of the diagnostics if the module has no current flow or the current is insufficient for measurement at the correspondingly assigned input.

Type/range of measurement

See the section Measurement types and measuring ranges (Page 13).

Temperature coefficient

The temperature coefficient depends on the chemical composition of the material. In Europe, only one value is used per sensor type (default value).

The temperature coefficient (α value) indicates by how much the resistance of a specific material changes relatively if the temperature increases by 1 °C.

The other values facilitate a sensor-specific setting of the temperature coefficient and enhance accuracy.

Temperature unit

Selection between Degrees Celsius, Fahrenheit and Kelvin as the temperature unit for the selected measuring range.

Smoothing

The individual measured values are smoothed using filtering. The smoothing can be set in 4 levels.

Smoothing time = number of module cycles (k) x cycle time of the module.

The following figure shows how many module cycles it takes for the smoothed analog value to approach 100%, depending on the configured smoothing. This specification is valid for all signal changes at the analog input.

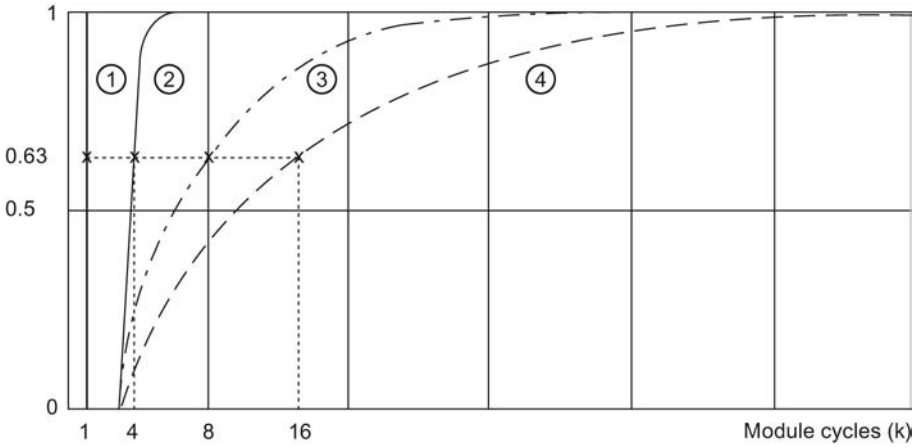

① No smoothing (k = 1)
② Weak (k = 4)
③ Medium (k = 8)
④ Strong (k = 16)

Figure 4-3 Smoothing for AI 4×RTD/TC 2-/3-/4-wire HF

Interference frequency suppression

Suppresses the interferences affecting analog input modules that are caused by the frequency of the AC voltage network used.

The frequency of the AC voltage network is likely to have a negative effect on measured values particularly with measurement in the low voltage range and on thermocouples. With this parameter, the user specifies the line frequency that is predominant in the plant.

Measuring range resolution

Parameters for the measurement type thermal resistor standard and thermocouple.

Allows you to increase the resolution to 2 or 3 decimal places for a configurable section of the measuring range. See the Scalable measuring range (Page 28) section.

Measuring range center

Determines the temperature over which the scalable measuring range is symmetrically spanned. The value must be within the nominal range of the underlying measuring range. It is specified in integers.

Maximum / Minimum

Corresponds to overflow / underflow for the scalable measuring range.

Conductor resistance

Parameters for the measurement types resistor and thermal resistor (2-wire connection).

Used to compensate for the conductor resistance without having to interfere with the sensor wiring.

If the "Conductor resistor" parameter is configured higher than a value 0 mΩ, the module then automatically uses the factory calibration data.

Hardware interrupt enable

Enabling of a hardware interrupt if the high limit 1/2 or the low limit 1/2 is violated.

Low limit 1/2

Specify a threshold which triggers a hardware interrupt when violated.

High limit 1/2

Specify a threshold which triggers a hardware interrupt when violated.

Potential group

Specifies that a BaseUnit with incoming voltage supply is located on this slot (see system manual ET 200SP distributed I/O system (http://support.automation.siemens.com/WW/view/en/58649293)).

4.4 Scalable measuring range

Introduction

The scalable measuring range is available for the temperature measuring ranges of thermal resistors (RTD) standard and thermocouples. The measuring ranges for voltage, resistor and thermal resistor climatic are not supported.

The scalable measuring range is valid for the following ranges:

- Nominal range
- Underrange
- Overrange

Function

The scalable measuring range is a limited section of a measuring range supported by the module.

It allows you to increase the resolution for a configurable section.

- The "Measuring range resolution" parameter determines the resolution to 2 or 3 decimal places.
- The "Measuring range center" parameter determines the temperature over which the scalable measuring range is symmetrically spanned.

Value ranges

Table 4- 8 Value ranges

Scalable measuring range	Measuring range resolution		Values hex.
	2 decimal places	3 decimal places	
Overflow	>325.11	>32.511	$7FFF_H$
High limit	325.11	32.511	$7EFF_H$
Measuring range center	0	0	0_H
Low limit	-325.12	-32.512	8100_H
Underflow	<-325.12	<-32.512	8000_H

To obtain an absolute temperature, the measuring range center in the application program (as offset) must be calculated with the value of the user data of the scalable measuring range.

The measuring range center is always output in the user data as the value "0". The user data are correspondingly mapped to the bipolar input ranges in S7 format. Underflow / overflow is also formed in accordance with the limits of S7.

Rules

- The measuring range center must be within the nominal range of the underlying measuring range. It is specified in integers.
- The scalable measuring range is spanned symmetrically over the measuring range center. Depending on the resolution, various value ranges result (①, ②).
- The scalable measuring range is limited by underflow and overflow of the underlying measuring range:
  - It is clipped at the underflow when it falls below the limit.
  - It is clipped at the overflow when it exceeds the limit (③).

Example

The following example illustrates the effect of scalable measuring ranges:

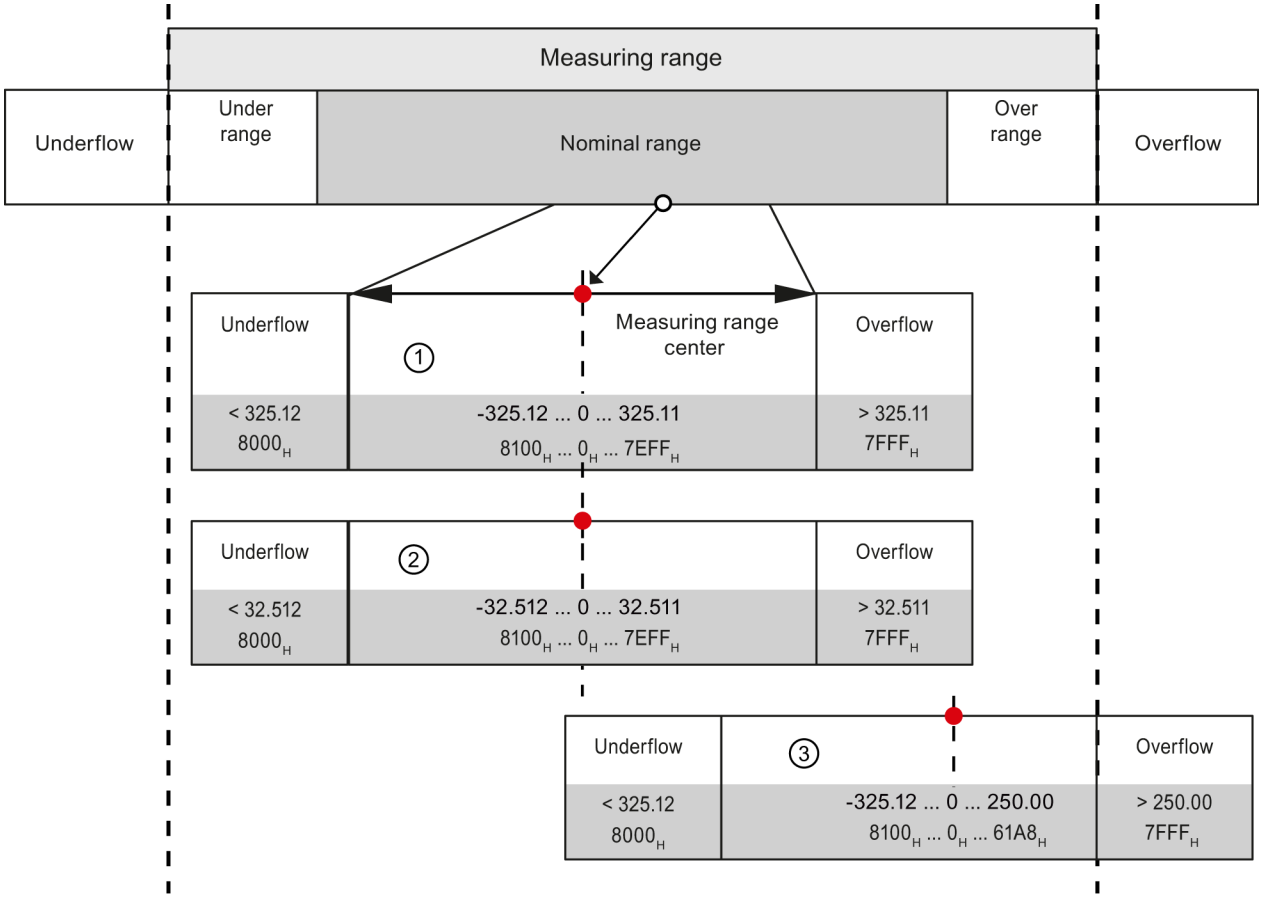

① Scalable measuring range with 2 decimal places in hexadecimal S7 format
② Scalable measuring range with 3 decimal places in hexadecimal S7 format
③ Scalable measuring range which is cut off at the overflow of the underlying measuring range (clipping)

Figure 4-4 Examples of scalable measuring ranges

4.4.1 Configuration

Requirement

You must select a valid temperature measuring range for configuration.

Configuration

The function is activated using the "Scalable measuring range" parameter.

The following figure shows an example of a configuration in STEP 7:

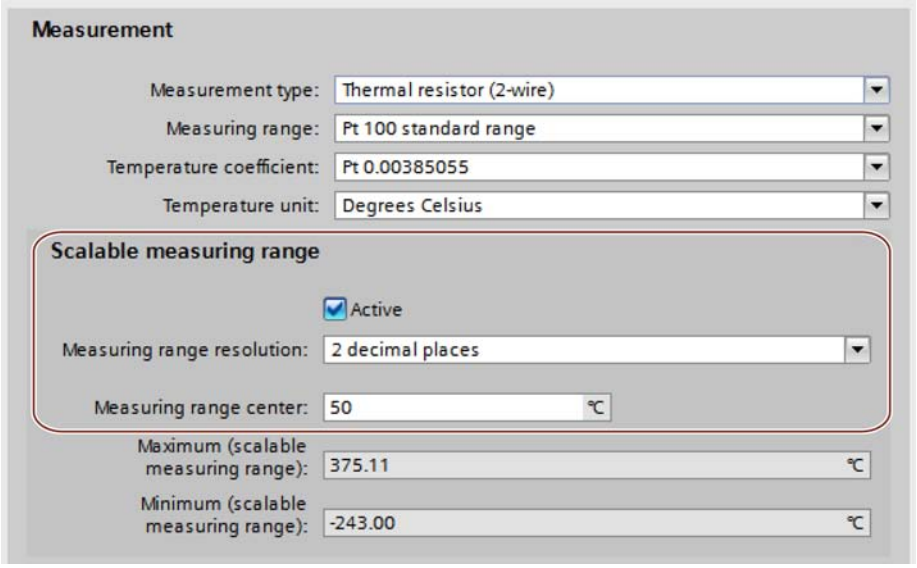

Figure 4-5 Configuration for the scalable measuring range

Reference

You will find more information on the configuration in the STEP 7 online help.

4.4.2 Evaluating data record 235

Evaluation in the user program

In the user program, you can evaluate the status and the limits of the scalable measuring range with data record 235, which may result by reaching underflow/overflow.

Structure of data record 235

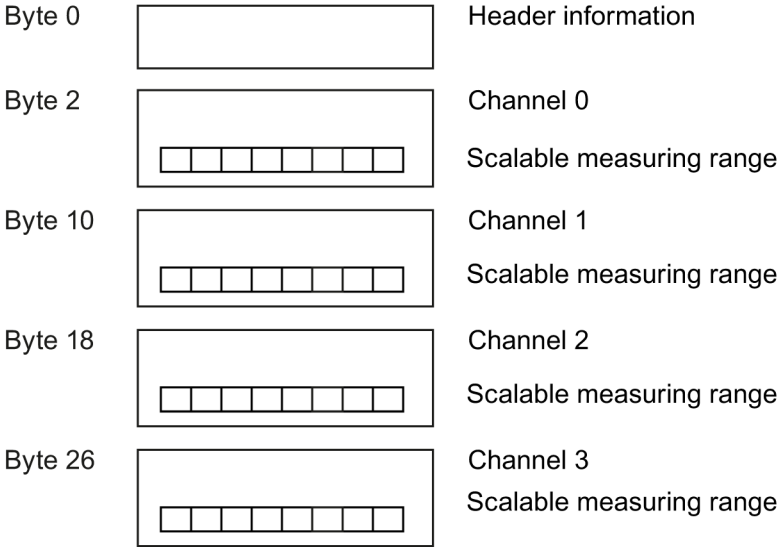

Figure 4-6 Structure of data record 235

Header information

The figure below shows the structure of the header information.

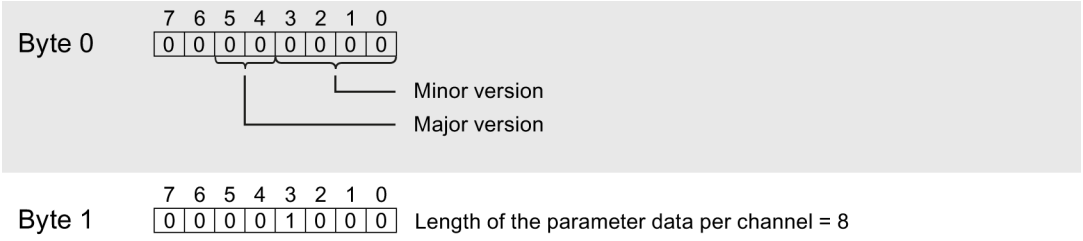
Byte 0
7 6 5 4 3 2 1 0
0 0 0 0 0 0 0 0
Minor version
Major version
Byte 1
7 6 5 4 3 2 1 0
0 0 0 0 1 0 0 0
Length of the parameter data per channel = 8

Figure 4-7 Header information of data record 235

Parameters

The figure below shows the structure of the parameter.

If the corresponding bit is set to "1", the parameter is activated.

* x = 2 + (channel number x 8)

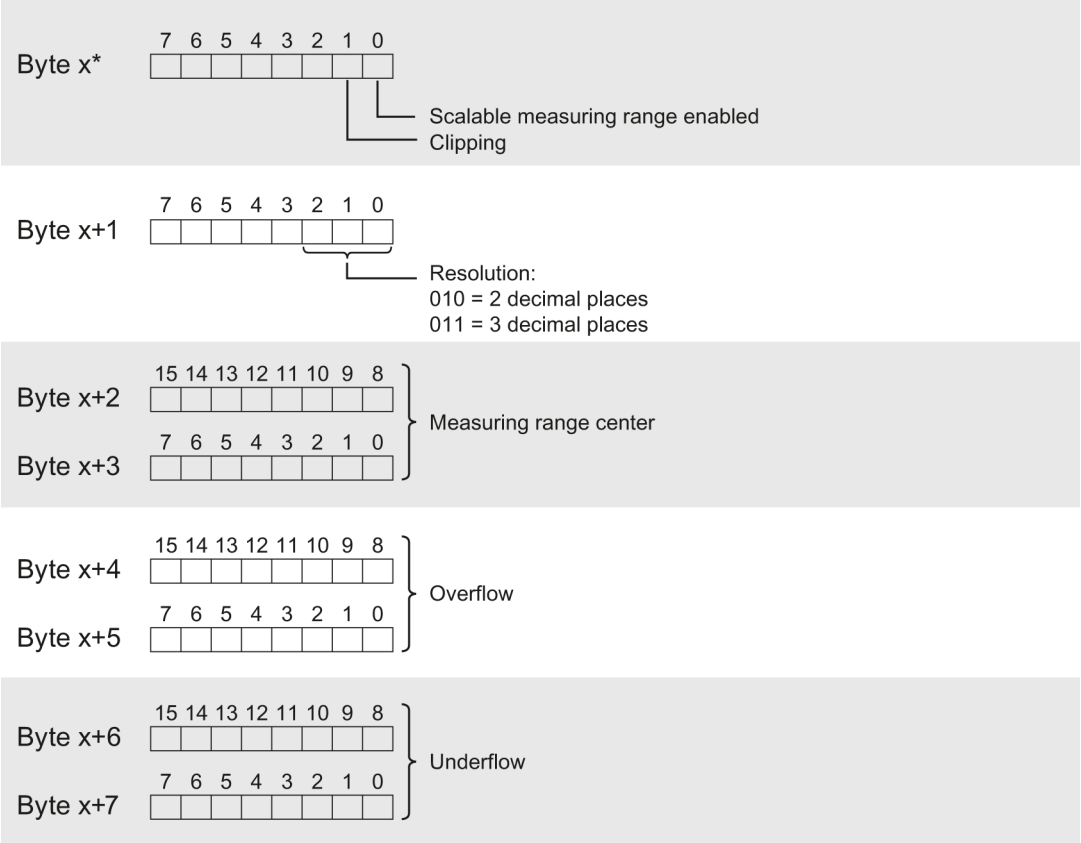
Byte x*
7 6 5 4 3 2 1 0
Scalable measuring range enabled
Clipping
Byte x+1
7 6 5 4 3 2 1 0
Resolution:
010 = 2 decimal places
011 = 3 decimal places
Byte x+2
15 14 13 12 11 10 9 8
Byte x+3
7 6 5 4 3 2 1 0
Measuring range center
Byte x+4
15 14 13 12 11 10 9 8
Byte x+5
7 6 5 4 3 2 1 0
Overflow
Byte x+6
15 14 13 12 11 10 9 8
Byte x+7
7 6 5 4 3 2 1 0
Underflow

Figure 4-8 Structure of data record 235 - channel parameter byte x to x+7

Description of the parameters

Table 4- 9 Description **of the parameters from data record 235**

Parameter	Description
Scalable measuring range enabled	1 = Function is active for this channel.
Clipping	1 = Scalable measuring range cut off at the overflow / underflow of the underlying measuring range (see Figure (Page 29)).
Resolution	2 or 3 decimal places
Measuring range center	Temperature in whole °C / °F / K ("working point" for the scaling)
Overflow/underflow	Limits of the scalable measuring range

Example

The following example shows the values for a thermal resistor Pt 100 Standard, °C:

Table 4- 10 Example of a thermal resistor Pt 100 Standard

Hex. value	Dec. value	Evaluation of data record 235
00_H	0	V0.0
08_H	8	8 bytes
03_H	3	Scalable measuring range active and clipped (clipping)
02_H	2	Resolution: 2 decimal places
$02EE_H$	750	Measuring range center: 750 °C
$61A8_H$	25000	Overflow (Maximum): 250.00 + 750 = 1000.00 °C Scalable measuring range is clipped at the overflow.
8100_H	-32512	Underflow (Minimum): -325.12 + 750 = 424.88 °C

4.5 Address space

Address space of the analog input module AI 4×RTD/TC 2-/3-/4-wire HF

The following figure shows the assignment of the address space with value status (Quality Information (QI)). The addresses for the value status are only available if the value status is enabled.

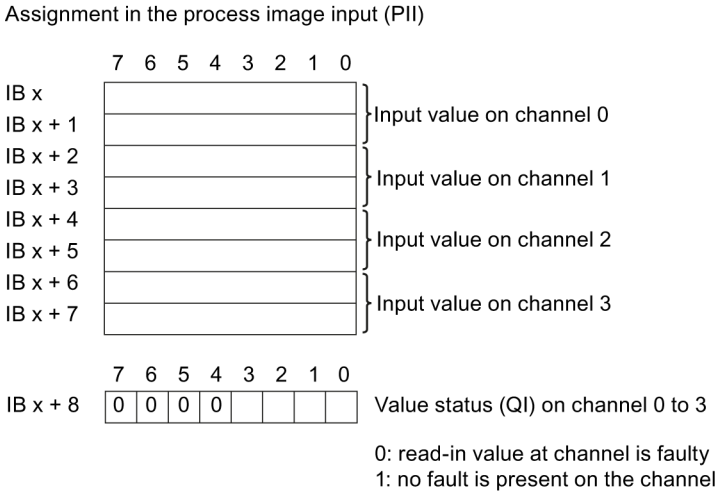
Assignment in the process image input (PII)
7 6 5 4 3 2 1 0
IB x
IB x + 1
IB x + 2
IB x + 3
IB x + 4
IB x + 5
IB x + 6
IB x + 7
Input value on channel 0
Input value on channel 1
Input value on channel 2
Input value on channel 3
7 6 5 4 3 2 1 0
IB x + 8
0 0 0 0
Value status (QI) on channel 0 to 3
0: read-in value at channel is faulty
1: no fault is present on the channel

Figure 4-9 Address space AI 4×RTD/TC 2-/3-/4-wire HF with value status

Configuration options of the AI 4xRTD/TC 2-/3-/4-wire HF

The following configurations are possible:

- Configuration 1: Without value status
- Configuration 2: With value status

Evaluating the value status (as of firmware version V1.01)

An additional byte is occupied in the input address space if you enable the value status for the analog module. Bit 0 to 3 in this byte is assigned to one channel and provides information on the validity of the analog value (0 = value is incorrect).

Interrupts/diagnostics alarms

5

5.1 Status and error display

LED display

The figure below shows the LED displays of the AI 4xRTD/TC 2-/3-/4-wire HF:

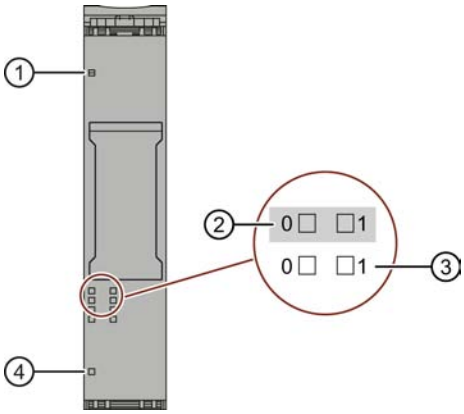

① DIAG (green/red)
② Channel status (green)
③ Channel error (red)
④ PWR (green)

Figure 5-1 LED display

Meaning of the LED displays

The following tables contain the meaning of the status and error displays. Remedies for diagnostics alarms can be found in section Diagnostics alarms (Page 38).

DIAG LED

Table 5- 1 Error display of the DIAG LED

DIAG LED	Meaning
Off	Backplane bus supply of the ET 200SP not OK
Flashes	Module parameters not assigned
On	Module parameters assigned and no module diagnostics
Flashes	Module parameters assigned and module diagnostics

Channel status/channel error LED

Table 5- 2 Status and error display of the LED channel status / channel error

LEDs		Meaning
Channel status	Channel error	
Off	Off	Channel deactivated
On	Off	Channel activated and no channel diagnostics
Off	On	Channel activated and channel diagnostics
On	On	Not permitted (error)

PWR LED

Table 5- 3 Status display of the PWR LED

PWR LED	Meaning
Off	Supply voltage L+ missing
On	Supply voltage L+ present

5.2 Interrupts

Evaluating hardware interrupts with IO controller

The module generates a hardware interrupt at the following events:

- Violation of low limit 1
- Violation of high limit 1
- Violation of low limit 2
- Violation of high limit 2

You can obtain detailed information on the event in the hardware interrupt organization block with the "RALARM" (read additional interrupt information) instruction and in the STEP 7 online help.

The module channel that triggered the hardware interrupt is entered in the start information of the organization block. The following figure shows the assignment to the bits of double word 8 in local data.

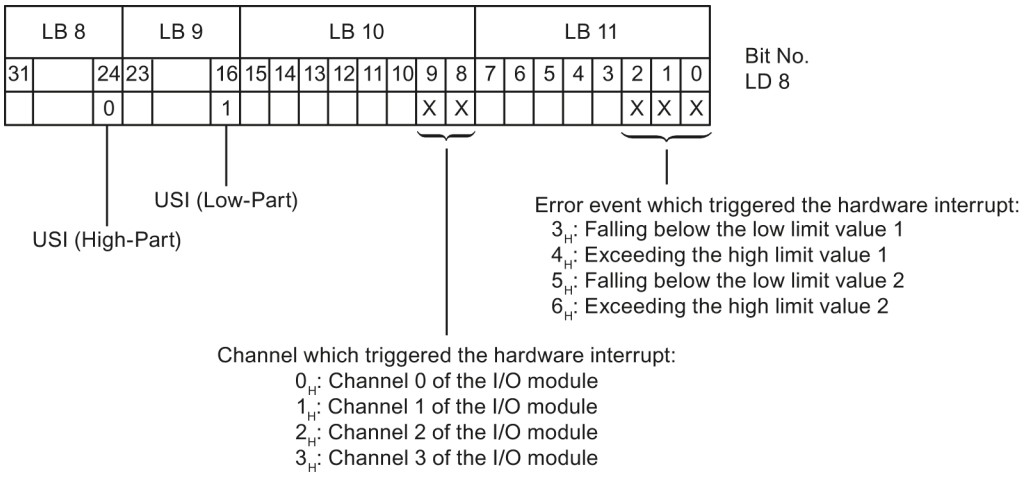
LB 8
LB 9
LB 10
LB 11
31 24 23 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
0 1 X X X X X
Bit No.
LD 8
USI (High-Part)
USI (Low-Part)
Error event which triggered the hardware interrupt:
3H: Falling below the low limit value 1
4H: Exceeding the high limit value 1
5H: Falling below the low limit value 2
6H: Exceeding the high limit value 2
Channel which triggered the hardware interrupt:
0H: Channel 0 of the I/O module
1H: Channel 1 of the I/O module
2H: Channel 2 of the I/O module
3H: Channel 3 of the I/O module

Figure 5-2 OB start information

Structure of the additional interrupt information

Table 5- 4 Structure of the additional interrupt information

Data block name		Content	Comment	Bytes
USI (User Structure Identifier)		W#16#0001	additional interrupt information for hardware interrupts of the I/O module	2
Channel that triggered the hardware interrupt.				
	Channel	B#16#00 to B#16#03	Channel 0 to 3 of the I/O module	1
Event that triggered the hardware interrupt.				
	Event	B#16#03	Violation of low limit 1	1
		B#16#04	Violation of high limit 1	
		B#16#05	Violation of low limit 2	
		B#16#06	Violation of high limit 2	

Diagnostic error interrupt

The module generates a diagnostic error interrupt at the following events:

- Channel temporarily unavailable
- Hardware interrupt lost
- Reference channel error
- Error
- Violation of low limit
- Violation of high limit
- Wire break
- Supply voltage missing
- Parameter assignment error

5.3 Diagnostics alarms

A diagnostics alarm is output for each diagnostics event and the DIAG LED on the module flashes. The diagnostics alarms can, for example, be read from the diagnostics buffer of the CPU. You can evaluate the error codes with the user program.

Table 5- 5 Diagnostics alarms, their meaning and remedies

Diagnostics alarms	Error code	Meaning	Remedy
Channel temporarily unavailable	$1F_H$	Firmware update is being performed. Channel 0 applies to the entire module. The module is currently not performing any measurements.	–
		The channel is currently being calibrated.	
Wire break	6_H	Resistance of sensor circuit too high	Use a different sensor type or modify the wiring, for example, using cables with larger cross-section
		Wire break between the module and sensor	Connect the cable
		Channel not connected (open)	• Deactivate diagnostics • Connect or deactivate the channel
Violation of high limit[1]	7_H	Value lies above the overrange.	Correct module/sensor interplay
		Wire break[2]	See Wire break
Violation of low limit[1]	8_H	Value lies below the underrange.	Correct module/sensor interplay
Error	9_H	Internal module error has occurred (diagnostics alarm on channel 0 applies to the entire module).	Replace module

Diagnostics alarms	Error code	Meaning	Remedy
Parameter assignment error	10_H	The module cannot evaluate parameters for the channel: Module plugged in does not match the configuration. Incorrect parameter assignment.	• Correct the configuration (comparison of preset and actual setup). • Correct the parameter assignment (diagnostics wire break set only with the permitted measuring ranges).
Load voltage missing	11_H	Missing or insufficient supply voltage L+	• Check supply voltage L+ on the BaseUnit • Check BaseUnit type
Reference channel error (reference junction)	15_H	Reference temperature of the reference junction for the TC channel being operated with compensation is invalid.	• Check BaseUnit type • Select correct reference junction through parameter assignment[3] • Check whether the reference junction (reference channel of the group 0, 1, 2, 3) is only assigned once as the sender in the entire setup.
Hardware interrupt lost	16_H	At least one hardware interrupt could not be reported because there were too many pending hardware interrupts.	Correct the program or the process

1 The alarm refers to the diagnostics and depends on the configured measuring range.

2 For resistor and thermal resistor measuring ranges with deactivated diagnostics for "Wire break", this is reported by the "Violation of high limit" diagnostic.

3 Shared Device and diagnostics "Reference temperature": If the sender and receiver of the reference junction temperature of a group are assigned to different IO controllers, you may need to download both configurations again in the case of diagnostics. First download the configuration containing the receiver.

Technical specifications

6

6.1 Technical specifications

Technical specifications of AI 4×RTD/TC 2-/3-/4-wire HF

	6ES7134-6JD00-0CA1
Product type designation	AI 4xRTD/TC 2-/3-/4-wire HF
General information	
Firmware version	V2.0
Usable BaseUnits	BU type A0, A1
Product function	
I&M data	Yes; I&M0 to I&M3
Engineering with	
STEP 7 TIA Portal can be configured/integrated as of version	V12 SP1 / V13
STEP 7 can be configured/integrated as of version	V5.5 SP3 / V5.5 SP4
PROFIBUS as of GSD version/GSD revision	GSD revision 5
PROFINET as of GSD version/GSD revision	GSDML V2.3
CiR Configuration in RUN	
Reconfiguration in RUN possible	Yes
Calibration in RUN possible	Yes
Installation type/mounting	
Rack mounting possible	Yes
Front installation possible	Yes
Rail mounting possible	Yes
Wall/direct mounting possible	No
Supply voltage	
Rated value (DC)	24 V
Valid range low limit (DC)	19.2 V
Valid range high limit (DC)	28.8 V
Reverse polarity protection	Yes
Input current	
Current consumption, max.	35 mA
Power loss	
Power loss, typ.	0.75 W
Address area	
Address space per module	
Address space per module, max.	8 bytes; + 1 byte for QI information

	6ES7134-6JD00-0CA1
Analog inputs	
Number of analog inputs	4
Maximum permissible input voltage for voltage input (destruction limit)	30 V
Constant measurement current for resistance-type sensor, typ.	2 mA
Cycle time (all channels), min.	Sum of the basic conversion times and additional processing times (depending on the parameter assignment of the activated channels); an additional cycle is necessary for cable compensation for a 3-wire connection
Technical unit for temperature measurement can be set	Yes
Input ranges (rated values), voltages	
-1 V to +1 V	Yes; 16 bits incl. sign
Input resistance (-1 V to +1 V)	1 MΩ
-250 mV to +250 mV	Yes; 16 bits incl. sign
Input resistance (-250 mV to +250 mV)	1 MΩ
-50 mV to +50 mV	Yes; 16 bits incl. sign
Input resistance (-50 mV to +50 mV)	1 MΩ
-80 mV to +80 mV	Yes; 16 bits incl. sign
Input resistance (-80 mV to +80 mV)	1 MΩ
Input ranges (rated values), thermocouples	
Type B	Yes; 16 bits incl. sign
Input resistance (Type B)	1 MΩ
Type C	Yes; 16 bits incl. sign
Input resistance (Type C)	1 MΩ
Type E	Yes; 16 bits incl. sign
Input resistance (Type E)	1 MΩ
Type J	Yes; 16 bits incl. sign
Input resistance (Type J)	1 MΩ
Type K	Yes; 16 bits incl. sign
Input resistance (Type K)	1 MΩ
Type L	Yes; 16 bits incl. sign
Input resistance (Type L)	1 MΩ
Type N	Yes; 16 bits incl. sign
Input resistance (Type N)	1 MΩ
Type R	Yes; 16 bits incl. sign
Input resistance (Type R)	1 MΩ
Type S	Yes; 16 bits incl. sign
Input resistance (Type S)	1 MΩ
Type T	Yes; 16 bits incl. sign
Input resistance (Type T)	1 MΩ
Type U	Yes; 16 bits incl. sign
Input resistance (Type U)	1 MΩ

	6ES7134-6JD00-0CA1
Type TXK/TXK(L) according to GOST	Yes; 16 bits incl. sign
Input resistance (Type TXK/TXK(L) according to GOST)	1 MΩ
Input ranges (rated values), resistance thermometer	
Cu 10	Yes; 16 bits incl. sign
Input resistance (Cu 10)	1 MΩ
Ni 100	Yes; 16 bits incl. sign
Input resistance (Ni 100)	1 MΩ
Ni 1000	Yes; 16 bits incl. sign
Input resistance (Ni 1000)	1 MΩ
LG-Ni 1000	Yes; 16 bits incl. sign
Input resistance (LG-Ni 1000)	1 MΩ
Ni 120	Yes; 16 bits incl. sign
Input resistance (Ni 120)	1 MΩ
Ni 200	Yes; 16 bits incl. sign
Input resistance (Ni 200)	1 MΩ
Ni 500	Yes; 16 bits incl. sign
Input resistance (Ni 500)	1 MΩ
Pt 100	Yes; 16 bits incl. sign
Input resistance (Pt 100)	1 MΩ
Pt 1000	Yes; 16 bits incl. sign
Input resistance (Pt 1000)	1 MΩ
Pt 200	Yes; 16 bits incl. sign
Input resistance (Pt 200)	1 MΩ
Pt 500	Yes; 16 bits incl. sign
Input resistance (Pt 500)	1 MΩ
Input ranges (rated values), resistors	
0 to 150 ohms	Yes; 15 bits
Input resistance (0 to 150 ohms)	1 MΩ
0 to 300 ohms	Yes; 15 bits
Input resistance (0 to 300 ohms)	1 MΩ
0 to 600 ohms	Yes; 15 bits
Input resistance (0 to 600 ohms)	1 MΩ
0 to 3000 ohms	Yes; 15 bits
Input resistance (0 to 3000 ohms)	1 MΩ
0 to 6000 ohms	Yes; 15 bits
Input resistance (0 to 6000 ohms)	1 MΩ
PTC	Yes; 15 bits
Input resistance (PTC)	1 MΩ
Thermocouple (TC)	
Technical unit for temperature measurement	°C/°F/K
Temperature compensation	
• Configurable	Yes
• Reference channel of the module	Yes

	6ES7134-6JD00-0CA1
• Internal reference junction	Yes; with BaseUnit type A1
• Reference channel of the group	Yes
• Number of reference channel groups	4; group 0 to 3
• Fixed reference temperature	Yes
Resistance thermometer (RTD)	
Maximum permissible input voltage for voltage input (destruction limit)	30 V
Technical unit for temperature measurement	°C/°F/K
Cable length	
Cable length shielded, max.	200 m; 50 m for thermocouples
Analog value generation	
Measuring principle	Integrating (sigma-delta)
Integration and conversion time/resolution per channel	
Resolution with overrange (bit including sign), max.	16 bit
Integration time configurable	Yes
Basic conversion time including integration time, ms	
• Additional processing time for wire break check	2 ms; in the resistance thermometer, resistor, and thermocouple areas
• Additional wire break check of the power line	2 ms; for 3-/4-wire transducer (resistance thermometer and resistor)
Interference voltage suppression for interference frequency f1 in Hz	16.6 / 50 / 60 Hz
Conversion time (per channel)	180 / 60 / 50 ms
Smoothing of the measured values	
Configurable	Yes
Setting: None	Yes
Setting: Weak	Yes
Setting: Medium	Yes
Setting: Strong	Yes
Sensors	
Wiring the signal transmitters	
For voltage measurement	Yes
for resistance measurement with 2-wire connection	Yes
for resistance measurement with 3-wire connection	Yes
for resistance measurement with 4-wire connection	Yes
Errors/accuracies	
Linearity error (in relation to input range), (+/-)	± 0.01%; +/- 0.1% for resistance thermometer and resistor
Temperature error (in relation to input range)	± 0.0009%/K; +/- 0.005%/K for thermocouple
Crosstalk between inputs, min.	-50 dB
Repeat accuracy in settled state at 25 °C (in relation to input range), (+/-)	± 0.05%

	6ES7134-6JD00-0CA1
Operational limit in entire temperature range	
Voltage in relation to input range, (+/-)	± 0.1%
Resistance in relation to input range, (+/-)	± 0.1%
Basic error limit (operational limit at 25 °C)	
Voltage in relation to input range, (+/-)	± 0.05%
Resistance in relation to input range, (+/-)	± 0.05%
Interference voltage suppression for f = n x (f1 +/-1%), f1 = interference frequency	
Series-mode interference (peak of the interference < rated value of the input range), min.	70 dB
Common mode voltage, max.	10 V
Common mode interference, min.	90 dB
Interrupts/diagnostics/status information	
Interrupts	
Diagnostic error interrupt	Yes
Limit interrupt	Yes; two high limits and two low limits each
Diagnostics alarms	
Diagnostics	Yes
Monitoring of supply voltage	Yes
Wire break	Yes; channel-based
Overflow/underflow	Yes; channel-based
Diagnostics indicator LED	
Monitoring of supply voltage	Yes; green PWR LED
Channel status display	Yes; green LED
For channel diagnostics	Yes; red LED
For module diagnostics	Yes; green/red DIAG LED
Electrical isolation	
Electrical isolation channels	
Between the channels	No
Between the channels and the backplane bus	Yes
Between the channels and the supply voltage of the electronics	Yes
Permitted potential difference	
Between different circuits	75 VDC / 60 VAC (basic insulation)
Between the inputs (UCM)	10 VDC
Insulation	
Insulation tested with	707 VDC (type test)
Dimensions	
Width	15 mm
Weights	
Weight, approx.	30 g

Operational and basic error limits for resistance thermometers

Error limits for resistance thermometers	
Operational limit (in the entire temperature range, in relation to input range)	
• Pt 100, Pt 200, Pt 500, Pt 1000 standard	±1.0 K
• Pt 100, Pt 200, Pt 500, Pt 1000 climatic	± 0.25 K
• Ni 100, Ni 120, Ni 200, Ni 500, Ni 1000 standard and climatic	± 0.4 K
• Cu 10	±1.5 K
Basic error limit (operational limit at 25 °C, in relation to input range)	
• Pt 100, Pt 200, Pt 500, Pt 1000 standard	± 0.6 K
• Pt 100, Pt 200, Pt 500, Pt 1000 climatic	± 0.13 K
• Ni 100, Ni 120, Ni 200, Ni 500, Ni 1000 standard and climatic	± 0.2 K
• Cu 10	±1.0 K

Operational and basic error limits for thermocouples

Error limits for thermocouples	
Operational limit for thermocouples (in the entire temperature range, in relation to the input range)	±1.5 K
Operational limit for type C thermocouples (in the entire temperature range, in relation to the input range)[1]	± 7 K
Basic error limit for thermocouples (operational limit at 25 °C, in relation to the input range)	±1 K
Basic error limit for type C thermocouples (operational limit at 25 °C, in relation to the input range)	± 5 K
Overall error limits when using internal compensation	
• Operational limit (in the entire temperature range at static thermal state, ambient temperature change < 0.3 K/min)[2]	± 2.5 K
• Basic error limit (operational limit at 25 °C at static thermal state, ambient temperature change < 0.3 K/min)[3]	±1.5 K

[1] The indicated error limits apply as of the following temperatures:
Thermocouple type T: -200 °C
Thermocouple type K: -100 °C
Thermocouple type B: +700 °C
Thermocouple type N: -150 °C
Thermocouple type E: -150 °C
Thermocouple type R: +200 °C
Thermocouple type S: +100 °C

[2] For thermocouple type C: ± 8 K

[3] For thermocouple type C: ± 6 K

Dimension drawing

See manual ET 200SP BaseUnits
(http://support.automation.siemens.com/WW/view/en/58532597/133300)

Parameter data record

A

A.1 Dependencies when configuring with GSD file

When configuring the module with a GSD file, remember that the settings of some parameters are dependent on each other.

Configuring with a PROFINET GSD file

The table lists the properties and their dependencies on the measurement type and measuring range for PROFINET.

Table A- 1 Dependencies of the measurement type / measuring range

Measurement type	Measuring range	Temperature coefficient	Reference junction	Temperature unit	Conductor resistance
Deactivated	*	*	*	*	*
Voltage	±50 mV, ±80 mV, ±250 mV, ±1 V	*	*	*	*
Resistor (2, 3, 4-wire connection)	150 Ω, 300 Ω, 600 Ω, 3 kΩ, 6 kΩ	*	*	*	x (with 2-wire connection)
Resistor (2-wire connection)	PTC	*	*	*	*
Thermal resistor (2, 3, 4-wire connection)	Pt100 climatic	Pt 0.00385055 Pt 0.003916 Pt 0.003902 Pt 0.00392 Pt 0.00385	Reference channel of group 0, 1, 2, 3	Degrees Celsius	x (with 2-wire connection)
			No reference channel mode	Degrees Celsius Degrees Fahrenheit	
	Pt200 Pt500 Pt1000 climatic		No reference channel mode	Degrees Celsius Degrees Fahrenheit	
	Ni100 Ni120 Ni200 Ni500 Ni1000 climatic	Ni 0.00618 Ni 0.00672			
	LG-Ni 1000 climatic	LG-Ni 0.005			

Measurement type	Measuring range	Temperature coefficient	Reference junction	Temperature unit	Conductor resistance
(3-wire connection)	Cu 10 climatic	Cu 0.00427			*
Thermal resistor (2, 3, 4-wire connection)	Pt100 Pt200 Pt500 Pt1000 standard	Pt 0.00385055 Pt 0.003916 Pt 0.003902 Pt 0.00392 Pt 0.00385	No reference channel mode	Degrees Celsius Degrees Fahrenheit Kelvin	x (with 2-wire connection)
	Ni100 Ni120 Ni200 Ni500 Ni1000 standard	Ni 0.00618 Ni 0.00672			
	LG-Ni 1000 standard	LG-Ni 0.005			
Thermal resistor (3-wire connection)	Cu 10 standard	Cu 0.00427			*
Thermocouple	Type B, N, E, R, S, J, L, T, K, U, C, TXK	*	Reference channel of the module[1] Internal reference junction Reference channel of group 0, 1, 2, 3[2]	Degrees Celsius Degrees Fahrenheit Kelvin	*
			Fixed reference temperature		

x = property is allowed, – = property is **not allowed**, * = property is not relevant

[1] Use of "Reference channel of the module":
- Channel 0 must be set as "Pt100 climatic" with temperature unit: "Degrees Celsius".
-For each TC channel of this module that is intended to use channel 0 as reference, "Reference junction" must be set to "Reference channel of the module".

[2] Use of "Reference channel of group 0, 1, 2, 3":
- An RTD channel must be set as "Pt100 climatic" with temperature unit: "Degrees Celsius".
- "Reference channel of group 0, 1, 2, 3" must be set as the "Reference junction" of this channel.
- There must only be one RTD channel with "Reference junction" = "Reference channel of group 0, 1, 2, 3" per group 0, 1, 2, 3 and IO device!
- For each TC channel in the IO device that is intended to use this reference, "Reference junction" must be set to "Reference channel of group 0, 1, 2, 3".
- If the reference channel is on channel 0, it can also be used as "Reference channel of the module" at the same time.

Configuring with a PROFINET GSD file

The table lists the properties and their dependencies on the measurement type for PROFINET.

Table A- 2 Dependencies on the measurement type

Measurement type	Scalable measuring range	Measuring range resolution	Diagnostics				
			Underflow	Overflow	Wire break	Missing supply voltage L+	Reference junction
Deactivated	*	*	*	*	*	*	*
Voltage	–	*	x	x	–	x	–
Resistor (2, 3, 4-wire connection)	–	*	x	x	x	x	–
Resistor PTC (2-wire connection)	–	*	x	–	–	x	–
Thermal resistor (2, 3, 4-wire connection)	x	2 and 3 decimal places	x	x	x	x	–
Thermocouple	x	2 and 3 decimal places	x	x	x	x	x[1)]

x = property is allowed, – = property is **not allowed**, * = property is not relevant

1 Property is not relevant if "Fixed reference temperature" is used

Configuring with a PROFIBUS GSD file

The table lists the properties and their dependencies on the measurement type and measuring range for PROFIBUS.

Measurement type	Measuring range	Temperature coefficient	Slot reference junction	Temperature unit	Diagnostics			
					Underflow / overflow	Wire break	Missing supply voltage L+	Reference junction
Deactivated	*	*	*	*	*	*	*	*
Voltage	±50 mV, ±80 mV, ±250 mV, ±1 V	*	*	*	x	–	x	–
Resistor (2, 3, 4-wire connection)	150 Ω, 300 Ω, 600 Ω, 3 kΩ, 6 kΩ	*	*	*	x	x	x	–

Measurement type	Measuring range	Temperature coefficient	Slot reference junction	Temperature unit	Diagnostics			
					Underflow / overflow	Wire break	Missing supply voltage L+	Reference junction
Resistor (2-wire connection)	PTC[3]	*	*	*	x	–	x	–
Thermal resistor (2, 3, 4-wire connection)	Pt100 climatic	Pt 0.00385055 Pt 0.003916 Pt 0.003902 Pt 0.00392 Pt 0.00385	Reference channel of group 0, 1, 2, 3	Degrees Celsius	x	x	x	–
			No reference channel mode	Degrees Celsius Degrees Fahrenheit	x	x	x	–
	Pt200 Pt500 Pt1000 climatic	Pt 0.00385055 Pt 0.003916 Pt 0.003902 Pt 0.00392 Pt 0.00385	No reference channel mode	Degrees Celsius Degrees Fahrenheit	x	x	x	–
Thermal resistor (2, 3, 4-wire connection)	Pt100 Pt200 Pt500 Pt1000 standard	Pt 0.00385055 Pt 0.003916 Pt 0.003902 Pt 0.00392 Pt 0.00385	No reference channel mode	Degrees Celsius Degrees Fahrenheit Kelvin	x	x	x	–
	Ni100 Ni120 Ni200 Ni500 Ni1000 climatic	Ni 0.00618 Ni 0.00672	No reference channel mode	Degrees Celsius Degrees Fahrenheit	x	x	x	–
	Ni100 Ni120 Ni200 Ni500 Ni1000 standard	Ni 0.00618 Ni 0.00672	No reference channel mode	Degrees Celsius Degrees Fahrenheit Kelvin	x	x	x	–
Thermal resistor (2, 3, 4-wire connection)	LG-Ni 1000 climatic	LG-Ni 0.005	No reference channel mode	Degrees Celsius Degrees Fahrenheit	x	x	x	–
	LG-Ni 1000 standard	LG-Ni 0.005	No reference channel mode	Degrees Celsius Degrees Fahrenheit Kelvin	x	x	x	–

Measurement type	Measuring range	Temperature coefficient	Slot reference junction	Temperature unit	Diagnostics			
					Underflow / overflow	Wire break	Missing supply voltage L+	Reference junction
Thermal resistor (3-wire connection)	Cu 10 climatic	Cu 0.00427	No reference channel mode	Degrees Celsius Degrees Fahrenheit	x	x	x	–
	Cu 10 standard	Cu 0.00427	No reference channel mode	Degrees Celsius Degrees Fahrenheit Kelvin	x	x	x	–
Thermocouple	Type B, N, E, R, S, J, L, T, K, U, C, TXK	*	Reference channel of the module[1] Internal reference junction Reference channel of group 0, 1, 2, 3[2]	Degrees Celsius Degrees Fahrenheit Kelvin	x	x	x	x
			Fixed reference temperature	Degrees Celsius Degrees Fahrenheit Kelvin	x	x	x	*

x = property is allowed, – = property is **not allowed**, * = property is not relevant

1 Use of the "Reference channel of the module":
- Channel 0 must be set to "Pt100 climatic" with the temperature unit "Degrees Celsius".
- For each TC channel of this module that is intended to use channel 0 as reference, "Reference junction" must be set to "Enable".

2 Use of "Reference channel of group 0":
- An RTD channel must be set as "Pt100 climatic" with temperature unit "Degrees Celsius".
- "Reference channel of group 0, 1, 2, 3" must be set as the "Reference junction" of this channel.
- There may be only one RTD channel with "Reference junction active" = "Enable" per group and row.
- For each TC channel of this row that is intended to use this reference, "Reference junction active" must be set to "Enable".

3 Underflow = 8000_H; wire break and overflow lead to 01_H (triggered) → (no diagnostics), wire break and overflow are therefore not relevant.

A.2 Parameter assignment and structure of parameter data record

The data records of the module have an identical structure, regardless of whether you configure the module with PROFIBUS DP or PROFINET IO.

Parameter assignment in the user program

The module parameter settings can be changed in RUN (for example, the voltage or current values of selected channels can be edited in RUN without having an effect on the other channels).

Changing parameters in RUN

The "WRREC" instruction is used to transfer the parameters to the module using data record 128. The parameters set with STEP 7 will not be changed on the CPU, which means that the parameters set in STEP 7 will be valid again after a restart.

Output parameter STATUS

If errors occur when transferring parameters with the "WRREC" instruction, the module continues operation with the previous parameter assignment. The STATUS output parameter contains a corresponding error code.

You will find a description of the "WRREC" instruction and the error codes in the STEP 7 online help.

Structure of data record 128

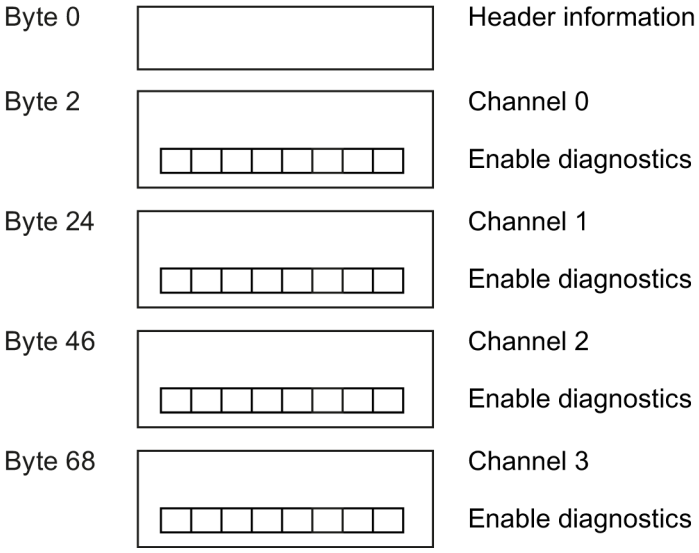

Figure A-1 Structure of data record 128

Header information

The figure below shows the structure of the header information.

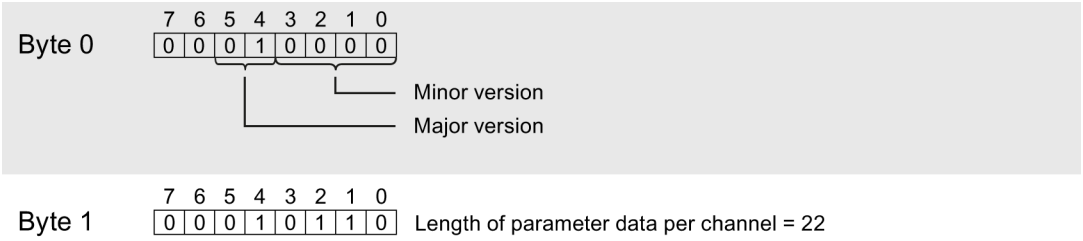

Figure A-2 Header information

Parameters

The figure below shows the structure of the parameters for channels 0 to 3.

You can activate a parameter by setting the corresponding bit to "1".

* x = 2 + (channel number * 22); channel number = 0 to 3

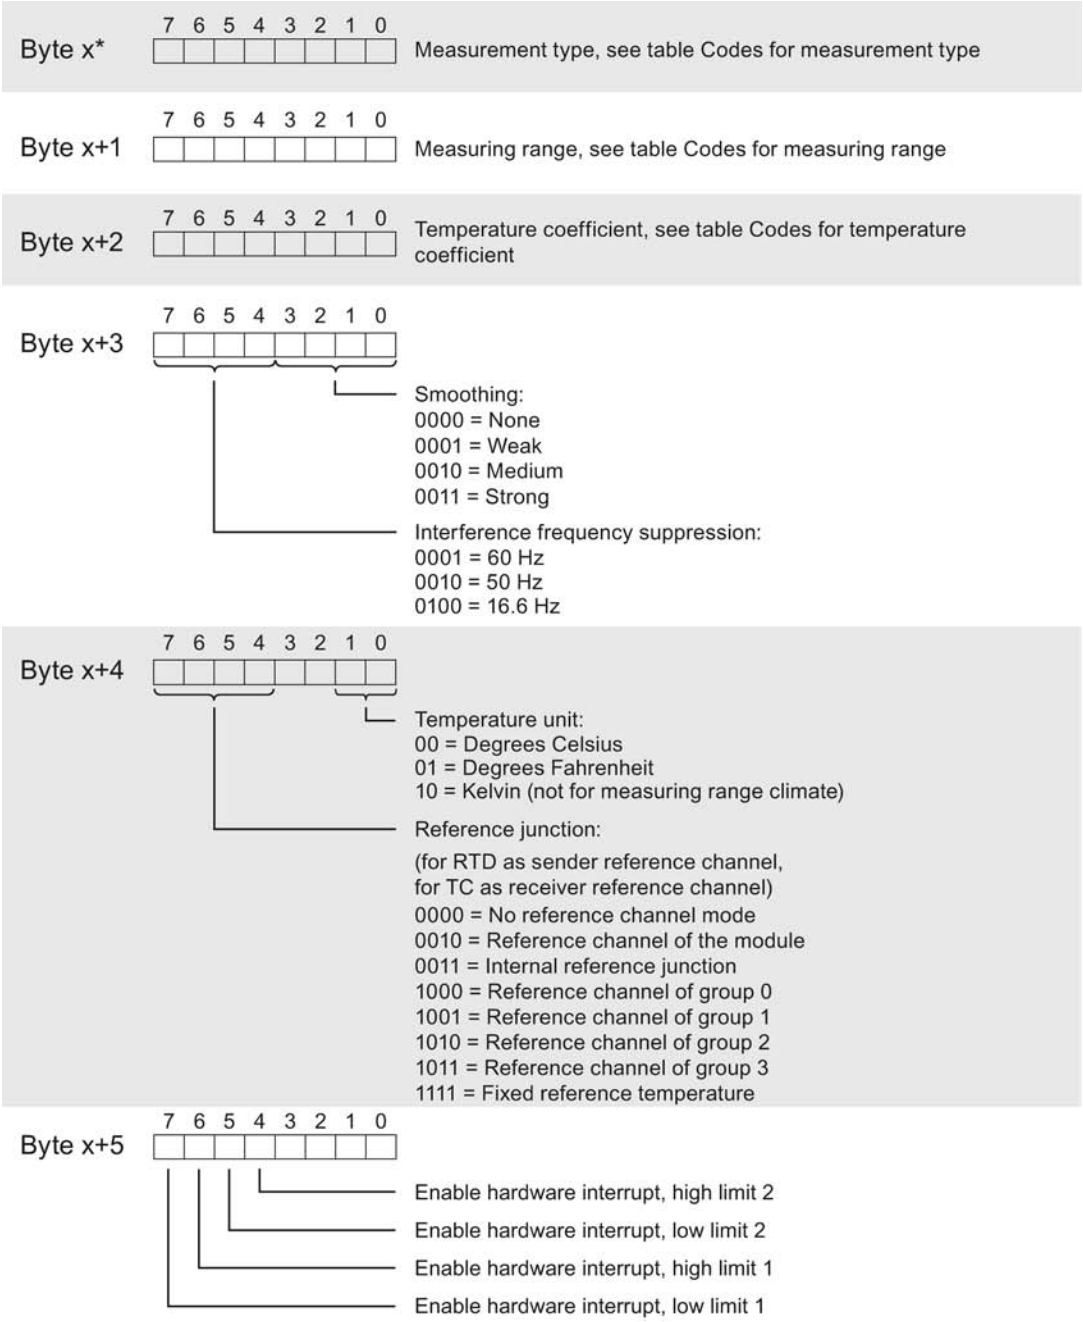
Byte x*
7 6 5 4 3 2 1 0
Measurement type, see table Codes for measurement type
Byte x+1
7 6 5 4 3 2 1 0
Measuring range, see table Codes for measuring range
Byte x+2
7 6 5 4 3 2 1 0
Temperature coefficient, see table Codes for temperature coefficient
Byte x+3
7 6 5 4 3 2 1 0
Smoothing:
0000 = None
0001 = Weak
0010 = Medium
0011 = Strong
Interference frequency suppression:
0001 = 60 Hz
0010 = 50 Hz
0100 = 16.6 Hz
Byte x+4
7 6 5 4 3 2 1 0
Temperature unit:
00 = Degrees Celsius
01 = Degrees Fahrenheit
10 = Kelvin (not for measuring range climate)
Reference junction:
(for RTD as sender reference channel,
for TC as receiver reference channel)
0000 = No reference channel mode
0010 = Reference channel of the module
0011 = Internal reference junction
1000 = Reference channel of group 0
1001 = Reference channel of group 1
1010 = Reference channel of group 2
1011 = Reference channel of group 3
1111 = Fixed reference temperature
Byte x+5
7 6 5 4 3 2 1 0
Enable hardware interrupt, high limit 2
Enable hardware interrupt, low limit 2
Enable hardware interrupt, high limit 1
Enable hardware interrupt, low limit 1

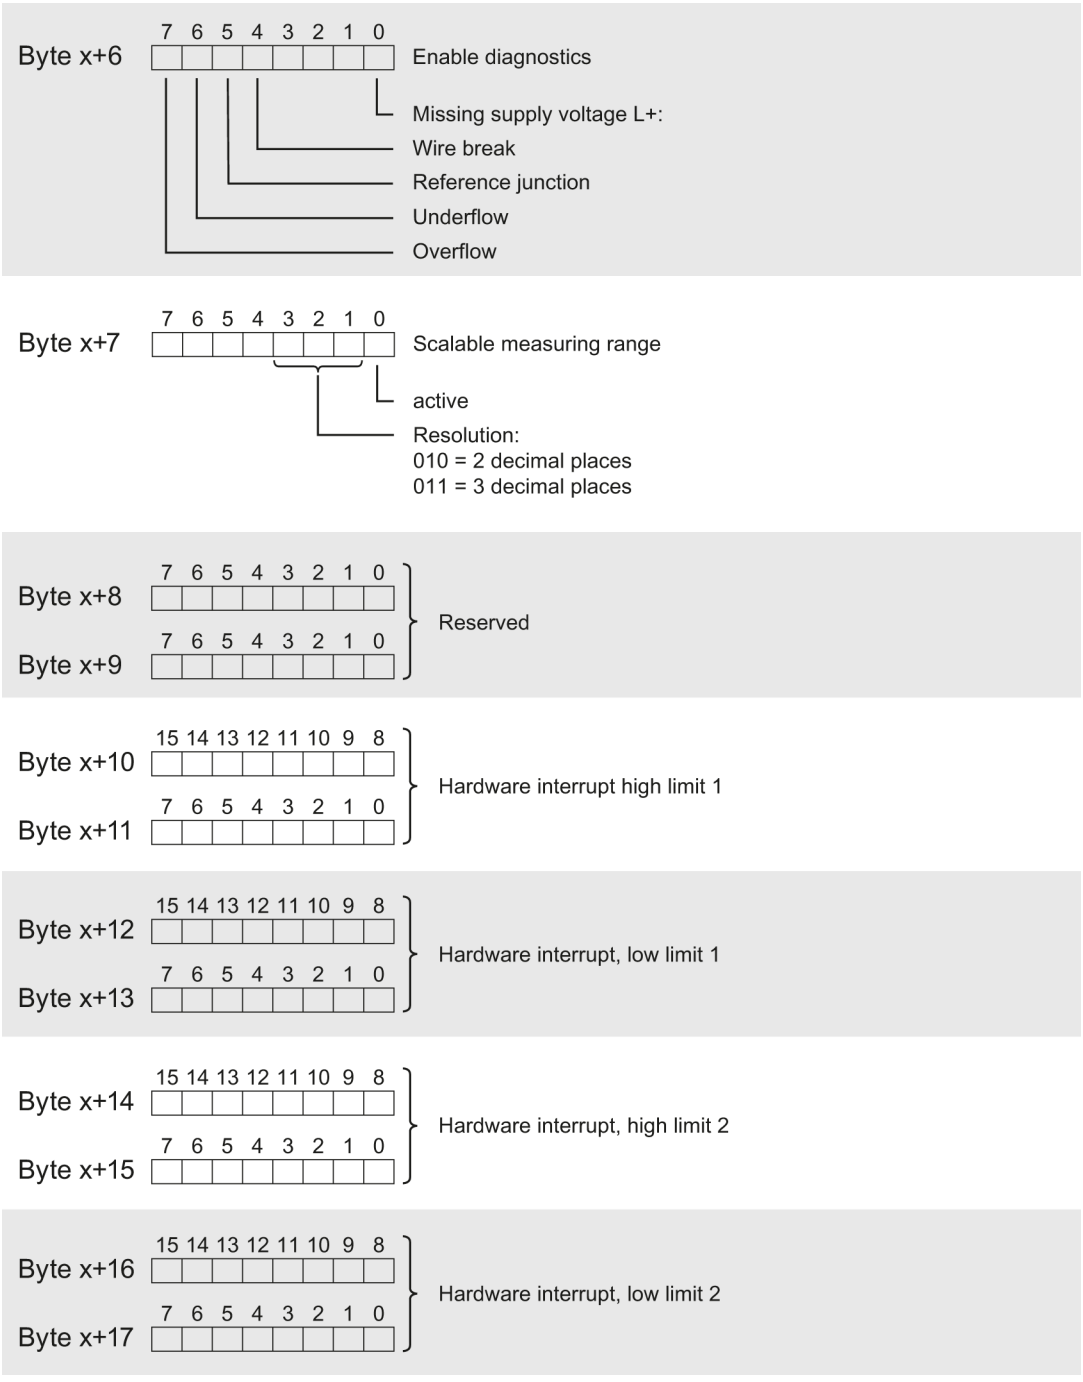
Byte x+6
7 6 5 4 3 2 1 0
Enable diagnostics
Missing supply voltage L+:
Wire break
Reference junction
Underflow
Overflow
Byte x+7
7 6 5 4 3 2 1 0
Scalable measuring range
active
Resolution:
010 = 2 decimal places
011 = 3 decimal places
Byte x+8
Byte x+9
7 6 5 4 3 2 1 0
Reserved
Byte x+10
Byte x+11
15 14 13 12 11 10 9 8
7 6 5 4 3 2 1 0
Hardware interrupt high limit 1
Byte x+12
Byte x+13
Hardware interrupt, low limit 1
Byte x+14
Byte x+15
Hardware interrupt, high limit 2
Byte x+16
Byte x+17
Hardware interrupt, low limit 2

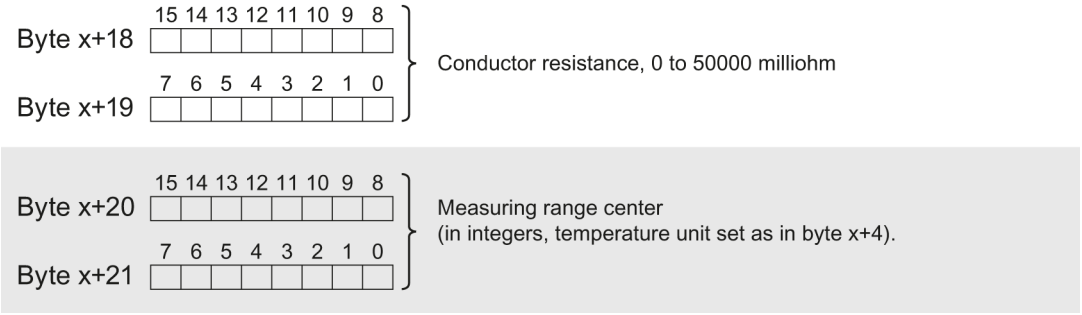
15 14 13 12 11 10 9 8
Byte x+18
7 6 5 4 3 2 1 0
Byte x+19
Conductor resistance, 0 to 50000 milliohm
15 14 13 12 11 10 9 8
Byte x+20
7 6 5 4 3 2 1 0
Byte x+21
Measuring range center
(in integers, temperature unit set as in byte x+4).

Figure A-3 Structure of byte x to x+21 for channel 0 to 3

Codes for measurement type

The following table contains the codes for the measurement types of the analog input module. You must enter these codes at byte x (see previous figure).

Table A- 3 Codes for measurement type

Measurement type	Code
Deactivated	0000 0000
Voltage	0000 0001
Resistor, 4-wire connection	0000 0100
Resistor, 3-wire connection	0000 0101
Resistor, 2-wire connection	0000 0110
Thermal resistor, 4-wire connection	0000 0111
Thermal resistor, 3-wire connection	0000 1000
Thermal resistor, 2-wire connection	0000 1001
Thermocouple	0000 1010

Codes for measuring range

The following table contains the codes for the measuring ranges of the analog input module. You must enter these codes at byte x+1 (see previous figure).

Table A- 4 Codes for measuring range

Measuring range	Code
Voltage	
50 mV	0000 0001
80 mV	0000 0010
250 mV	0000 0011
1 V	0000 0101
Resistor	
150 Ω	0000 0001
300 Ω	0000 0010
600 Ω	0000 0011
3 kΩ	0000 0100
6 kΩ	0000 0101
PTC	0000 1111
Thermal resistor climatic	
Pt 100	0000 0000
Pt 200	0000 0111
Pt 500	0000 1000
Pt 1000	0000 1001
Thermal resistor standard	
Pt 100	0000 0010
Pt 200	0000 1011
Pt 500	0000 0100
Pt 1000	0000 0101
Thermal resistor climatic	
Ni 100	0000 0001
Ni 120	0000 1101
Ni 200	0001 0001
Ni 500	0001 0011
Ni 1000	0000 1010
LG-Ni 1000	0001 1101
Thermal resistor standard	
Ni 100	0000 0011
Ni 120	0000 1100
Ni 200	0001 0000
Ni 500	0001 0010
Ni 1000	0000 0110
LG-Ni 1000	0001 1100

Measuring range	Code
Thermal resistor	
Cu 10 climatic	0000 1110
Cu 10 standard	0000 1111
Thermocouple	
Type B	0000 0000
Type N	0000 0001
Type E	0000 0010
Type R	0000 0011
Type S	0000 0100
Type J	0000 0101
Type L	0000 0110
Type T	0000 0111
Type K	0000 1000
Type U	0000 1001
Type C	0000 1010
Type TXK	0000 1011

Codes for temperature coefficient for temperature measurement

The following table contains the codes for the temperature coefficients of the analog input module. You must enter these codes at byte x+2 (see previous figure).

Table A- 5 Codes for temperature coefficient for temperature measurement

Temperature coefficient	Code
Pt 0.00385055	0000 0000
Pt 0.003916	0000 0001
Pt 0.003902	0000 0010
Pt 0.00392	0000 0011
Pt 0.00385	0000 0100
Ni 0.00618	0000 1000
Ni 0.00672	0000 1001
LG-Ni 0.005	0000 1010
Cu 0.00427	0000 1100

Limits for hardware interrupts

The following tables contain the permitted limits for hardware interrupts (in each case, the usable value is given). The limits depend on the selected measurement type and the selected measuring range. The value for the overflow must be larger than the value for the underflow.

Table A- 6 Limits for resistor and voltage

Resistor (all possible measuring range settings)	**Voltage**	
32510	32510	Overflow
1	-32511	Underflow

Table A- 7 Limits for thermocouple types B, C, and E

Thermocouple									
Type B			Type C			Type E			
°C	°F	K	°C	°F	K	°C	°F	K	
20699	32765	23431	24999	32765	27731	11999	21919	14731	Overflow
-1199	-1839	1533	-1199	-1839	1533	-2699	-4539	33	Underflow

Table A- 8 Limits for thermocouple types R, S, J, and L

Thermocouple									
Types R, S			Type J			Type L			
°C	°F	K	°C	°F	K	°C	°F	K	
20189	32765	22921	14499	26419	17231	11499	21019	14231	Overflow
-1699	-2739	1033	-2099	-3459	633	-1999	-3279	733	Underflow

Table A- 9 Limits for thermocouple types T, K, and U

Thermocouple									
Type T			Type K			Type U			
°C	°F	K	°C	°F	K	°C	°F	K	
5399	10039	8131	16219	29515	18951	8499	15619	11231	Overflow
-2699	-4539	33	-2699	-4539	33	-1999	-3279	733	Underflow

Table A- 10 Limits for thermocouple types N and TXK

Thermocouple						
Type N			Type TXK			
°C	°F	K	°C	°F	K	
15499	28219	18231	10499	19219	13231	Overflow
-2699	-4539	33	-1999	-3279	733	Underflow

Table A- 11 Limits for thermal resistor

Thermal resistor						
	Standard			Climatic		
	°C	°F	K	°C	°F	
Cu	3119	5935	5851	17999	32765	Overflow
	-2399	-3999	333	-5999	-7599	Underflow
Pt	9999	18319	12731	15499	31099	Overflow
	-2429	-4053	303	-14499	-22899	Underflow
Ni, Ni-LG	2949	5629	5681	29499	32765	Overflow
	-1049	-1569	1683	-10499	-15699	Underflow

A.3 Switchable wire break check

Function

The "Switchable wire break check" is available for thermocouples. It switches off the wire break check for the module.

This is required, for example, to calibrate thermocouples, since the test current necessary for a wire break check leads to measurement errors during calibration.

The function has no effect on channels that are not assigned in the thermocouple mode.

Note

Startup and parameter reassignment

The wire break check is switched on again at each startup and during any parameter reassignment of the module.

Switch-off via the user program

You can deactivate the wire break check using data record 237.

Table A- 12 Structure of data record 237, switchable wire break check

Byte	Function	Format	Value	Description
0	Command	UBYTE	80_H	Wire break check
1	Identifier	UBYTE	00_H	Not relevant
2	Channel number	UBYTE	FF_H	All channels
3	Calibration step	UBYTE	FF_H	First triggering
4	Measurement type	UBYTE	00_H	Not relevant
5	Measuring range	UBYTE	00_H	Not relevant
6	Action	UBYTE	01_H	Deactivate wire break check
			02_H	Activate wire break check
7...17	Reserved	UBYTE	00_H	Not relevant

Representation of analog values

B

This appendix shows the analog values for all measuring ranges supported by the analog input module AI 4xRTD/TC 2-/3-/4-wire HF.

Measured value resolution

The resolution of the analog values differs depending on the analog module and its assigned parameters.

Each analog value is written left aligned to the tags. The bits marked with "x" are set to "0".

Note

The digitized temperature values are the result of a conversion in the analog module. The following resolution therefore does not apply to temperature values.

Table B- 1 Resolution of the analog values

Resolution in bits including sign	Values		Analog value	
	Decimal	Hexadecimal	High byte	Low byte
14	4	4_H	Sign 0 0 0 0 0 0 0	0 0 0 0 0 1 x x
15	2	2_H	Sign 0 0 0 0 0 0 0	0 0 0 0 0 0 1 x
16	1	1_H	Sign 0 0 0 0 0 0 0	0 0 0 0 0 0 0 1

B.1 Representation of input ranges

In the following tables, you can find the digitized representation of the bipolar and unipolar input ranges. The resolution is 16 bits.

Table B- 2 Bipolar input ranges

Dec. value	Measured value in %	Data word																Range
		2^{15}	2^{14}	2^{13}	2^{12}	2^{11}	2^{10}	2^{9}	2^{8}	2^{7}	2^{6}	2^{5}	2^{4}	2^{3}	2^{2}	2^{1}	2^{0}	
32767	>117.589	0	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	Overflow
32511	117.589	0	1	1	1	1	1	1	0	1	1	1	1	1	1	1	1	Overrange
27649	100.004	0	1	1	0	1	1	0	0	0	0	0	0	0	0	0	1	
27648	100.000	0	1	1	0	1	1	0	0	0	0	0	0	0	0	0	0	Nominal range
1	0.003617	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	1	
0	0.000	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	
-1	-0.003617	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	
-27648	-100.000	1	0	0	1	0	1	0	0	0	0	0	0	0	0	0	0	
-27649	-100.004	1	0	0	1	0	0	1	1	1	1	1	1	1	1	1	1	Underrange
-32512	-117.593	1	0	0	0	0	0	0	1	0	0	0	0	0	0	0	0	
-32768	<-117.593	1	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	Underflow

Table B- 3 Unipolar input ranges

Dec. value	Measured value in %	Data word																Range
		2^{15}	2^{14}	2^{13}	2^{12}	2^{11}	2^{10}	2^{9}	2^{8}	2^{7}	2^{6}	2^{5}	2^{4}	2^{3}	2^{2}	2^{1}	2^{0}	
32767	>117.589	0	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	Overflow
32511	117.589	0	1	1	1	1	1	1	0	1	1	1	1	1	1	1	1	Overrange
27649	100.004	0	1	1	0	1	1	0	0	0	0	0	0	0	0	0	1	
27648	100.000	0	1	1	0	1	1	0	0	0	0	0	0	0	0	0	0	Nominal range
1	0.003617	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	1	
0	0.000	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	
-1	-0.003617	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	Underrange
-4864	-17.593	1	1	1	0	1	1	0	1	0	0	0	0	0	0	0	0	
-32768	<-17.593	1	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	Underflow

B.2 Representation of analog values in voltage measuring ranges

The following tables list the decimal and hexadecimal values (codes) of the possible voltage measuring ranges.

Table B- 4 Voltage measuring range ±1 V

Values		Voltage measuring range	Range
Dec.	Hex.	±1 V	
32767	7FFF	> 1.176 V	Overflow
32511	7EFF	1.176 V	Overrange
27649	6C01		
27648	6C00	1 V	Nominal range
20736	5100	0.75 V	
1	1	36.17 µV	
0	0	0 V	
-1	FFFF		
-20736	AF00	-0.75 V	
-27648	9400	-1 V	
-27649	93FF		Underrange
-32512	8100	-1.176 V	
-32768	8000	<-1.176 V	Underflow

Table B- 5 Voltage measuring range ±500 mV to ±50 mV

Values		Voltage measuring range			Range
Dec.	Hex.	±250 mV	±80 mV	±50 mV	
32767	7FFF	> 294.0 mV	> 94.1 mV	> 58.8 mV	Overflow
32511	7EFF	294.0 mV	94.1 mV	58.8 mV	Overrange
27649	6C01				
27648	6C00	250 mV	80 mV	50 mV	Nominal range
20736	5100	187.5 mV	60 mV	37.5 mA	
1	1	9.04 µV	2.89 µV	1.81 µV	
0	0	0 mV	0 mV	0 mV	
-1	FFFF				
-20736	AF00	-187.5 mV	-60 mV	-37.5 mV	
-27648	9400	-250 mV	-80 mV	-50 mV	
-27649	93FF				Underrange
-32512	8100	-294.0 mV	-94.1 mV	-58.8 mV	
-32768	8000	<-294.0 mV	<-94.1 mV	<-58.8 mV	Underflow

B.3 Representation of analog values for resistance-type sensors

The following tables list the decimal and hexadecimal values (codes) of the possible resistance-type sensor ranges.

Table B- 6 Resistance-type sensors from 150 Ω to 6000 Ω

Values		Resistance-type sensor range					Range
Dec.	Hex.	150 Ω	300 Ω	600 Ω	3000 Ω	6000 Ω	
32767	7FFF	> 176.38 Ω	> 352.77 Ω	> 705.53 Ω	> 3527.7 Ω	> 7055.3 Ω	Overflow
32511	7EFF	176.38 Ω	352.77 Ω	705.53 Ω	3527.7 Ω	7055.3 Ω	Overrange
27649	6C01						
27648	6C00	150 Ω	300 Ω	600 Ω	3000 Ω	6000 Ω	Nominal range
20736	5100	112.5 Ω	225 Ω	450 Ω	2250 Ω	4500 Ω	
1	1	5.43 mΩ	10.85 mΩ	21.70 mΩ	108.5 mΩ	217 mΩ	
0	0	0 Ω	0 Ω	0 Ω	0 Ω	0 Ω	
-32768	8000	(negative values are physically impossible)					Underflow[1]

[1] If the resistors are not connected correctly or the conductor resistance is too high

B.4 Representation of analog values for thermal resistors

Note

A higher resolution can be configured for the measuring range for the standard resistance thermometers, see section Scalable measuring range (Page 28).

The tables below list the decimal and hexadecimal values (codes) of the thermal resistors.

Table B- 7 Thermal resistor Pt 100, 200, 500, 1000 standard

Pt x00 Standard in °C (1 digit = 0.1°C)	Values		Pt x00 Standard in °F (1 digit = 0.1 °F)	Values		Pt x00 standard in K (1 digit = 0.1 K)	Values		Range
	Dec.	Hex.		Dec.	Hex.		Dec.	Hex.	
> 1000.0	32767	7FFF	> 1832.0	32767	7FFF	> 1273.2	32767	7FFF	Overflow
1000.0 : 850.1	10000 : 8501	2710 : 2135	1832.0 : 1562.1	18320 : 15621	4790 : 3D05	1273.2 : 1123.3	12732 : 11233	31BC : 2BE1	Overrange
850.0 : -200.0	8500 : -2000	2134 : F830	1562.0 : -328.0	15620 : -3280	3D04 : F330	1123.2 : 73.2	11232 : 732	2BE0 : 2DC	Nominal range
-200.1 : -243.0	-2001 : -2430	F82F : F682	-328.1 : -405.4	-3281 : -4054	F32F : F02A	73.1 : 30.2	731 : 302	2DB : 12E	Underrange
< -243.0	-32768	8000	< -405.4	-32768	8000	< 30.2	32768	8000	Underflow

Table B- 8 Thermal resistor Pt 100, 200, 500, 1000 climatic

Pt x00 climatic in °C (1 digit = 0.01 °C)	Values		Pt x00 climatic in °F (1 digit = 0.01 °F)	Values		Range
	Dec.	Hex.		Dec.	Hex.	
> 155.00	32767	7FFF	> 311.00	32767	7FFF	Overflow
155.00 : 130.01	15500 : 13001	3C8C : 32C9	311.00 : 266.01	31100 : 26601	797C : 67E9	Overrange
130.00 : -120.00	13000 : -12000	32C8 : D120	266.00 : -184.00	26600 : -18400	67E8 : B820	Nominal range
-120.01 : -145.00	-12001 : -14500	D11F : C75C	-184.01 : -229.00	-18401 : -22900	B81F : A68C	Underrange
< -145.00	-32768	8000	< -229.00	-32768	8000	Underflow

Table B- 9 Thermal resistor Ni 100, 120, 200, 500, 1000, LG-Ni 1000 standard

Ni x00 standard in °C (1 digit = 0.1 °C)	Values		Ni x00 standard in °F (1 digit = 0.1 °F)	Values		Ni x00 standard in K (1 digit = 0.1 K)	Values		Range
	Dec.	Hex.		Dec.	Hex.		Dec.	Hex.	
> 295.0	32767	7FFF	> 563.0	32767	7FFF	> 568.2	32767	7FFF	Overflow
295.0 : 250.1	2950 : 2501	B86 : 9C5	563.0 : 482.1	5630 : 4821	15FE : 12D5	568.2 : 523.3	5682 : 5233	1632 : 1471	Overrange
250.0 : -60.0	2500 : -600	9C4 : FDA8	482.0 : -76.0	4820 : -760	12D4 : FD08	523.2 : 213.2	5232 : 2132	1470 : 854	Nominal range
-60.1 : -105.0	-601 : -1050	FDA7 : FBE6	-76.1 : -157.0	-761 : -1570	FD07 : F9DE	213.1 : 168.2	2131 : 1682	853 : 692	Underrange
< -105.0	-32768	8000	< -157.0	-32768	8000	< 168.2	32768	8000	Underflow

Table B- 10 Thermal resistor Ni 100, 120, 200, 500, 1000, LG-Ni 1000 climatic

Ni x00 climatic in °C (1 digit = 0.01 °C)	Values		Ni x00 climatic in °F (1 digit = 0.01 °F)	Values		Range
	Dec.	Hex.		Dec.	Hex.	
> 295.00	32767	7FFF	> 327.66	32767	7FFF	Overflow
295.00 : 250.01	29500 : 25001	733C : 61A9	327.66 : 280.01	32766 : 28001	7FFE : 6D61	Overrange
250.00 : -60.00	25000 : -6000	61A8 : E890	280.00 : -76.00	28000 : -7600	6D60 : E250	Nominal range
-60.01 : -105.00	-6001 : -10500	E88F : D6FC	-76.01 : -157.00	-7601 : -15700	E24F : C2AC	Underrange
< - 105.00	-32768	8000	< - 157.00	-32768	8000	Underflow

Table B- 11 Thermal resistor Cu 10 standard

Cu 10 standard in °C (1 digit = 0.01 °C)	Values		Cu 10 standard in °F (1 digit = 0.01 °F)	Values		Cu 10 standard in K (1 digit = 0.01 K)	Values		Range
	Dec.	Hex.		Dec.	Hex.		Dec.	Hex.	
> 312.0	32767	7FFF	> 593.6	32767	7FFF	> 585.2	32767	7FFF	Overflow
312.0 : 260.1	3120 : 2601	C30 : A29	593.6 : 500.1	5936 : 5001	1730 : 12D5	585.2 : 533.3	5852 : 5333	16DC : 14D5	Overrange
260.0 : -200.0	2600 : -2000	A28 : F830	500.0 : -328.0	5000 : -3280	1389 : F330	533.2 : 73.2	5332 : 732	14D4 : $2DC_H$	Nominal range
-200.1 : -240.0	-2001 : -2400	F82F : F6A0	-328.1 : -400.0	-3281 : -4000	F32F : F060	73.1 : 33.2	731 : 332	2DB : $14C_H$	Underrange
< -240.0	-32768	8000	< -400.0	-32768	8000	< 33.2	32768	8000	Underflow

Table B- 12 Thermal resistor Cu 10 climatic

Cu 10 climatic in °C (1 digit = 0.01 °C)	Values		Cu 10 climatic in °F (1 digit = 0.01 °F)	Values		Range
	Dec.	Hex.		Dec.	Hex.	
> 180.00	32767	7FFF	> 325.11	32767	7FFF	Overflow
180.00 : 150.01	18000 : 15001	4650 : 3A99	327.66 : 280.01	32766 : 28001	7FFE : 6D61A	Overrange
150.00 : -50.00	15000 : -5000	3A98 : EC78	280.00 : - 58.00	28000 : -5800	6D60 : $E958_H$	Nominal range
-50.01 : -60.00	-5001 : -6000	EC77 : E890	-58.01 : -76.00	-5801 : -7600	E957 : E250	Underrange
< - 60.00	-32768	8000	< - 76.00	-32768	8000	Underflow

B.5 Representation of analog values for thermocouples

Note

A higher resolution can be configured for thermocouples, see section Scalable measuring range (Page 28).

The tables below list the decimal and hexadecimal values (codes) of the thermocouples.

Table B- 13 Thermocouple type B

Type B in °C	Values		Type B in °F	Values		Type B in K	Values		Range
	Dec.	Hex.		Dec.	Hex.		Dec.	Hex.	
> 2070.0	32767	7FFF	> 3276.6	32767	7FFF	> 2343.2	32767	7FFF	Overflow
2070.0 : 1820.1	20700 : 18201	50DC : 4719	3276.6 : 2786.6	32766 : 27866	7FFE : 6CDA	2343.2 : 2093.3	23432 : 20933	5B88 : 51C5	Overrange
1820.0 : 0.0	18200 : 0	4718 : 0000	2786.5 : 32.0	27865 : 320	6CD9 : 0140	2093.2 : 273.2	20932 : 2732	51C4 : 0AAC	Nominal range
-0.1 : -120.0	-1 : -1200	FFFF : FB50	31.9 : -184.0	319 : -1840	013F : F8D0	273.1 : 153.2	2731 : 1532	0AAB : 05FC	Underrange
< -120.0	-32768	8000	< -184.0	-32768	8000	< 153.2	-32768	8000	Underflow

Table B- 14 Thermocouple type C

Type C in °C	Values		Type C in °F	Values		Type C in K	Values		Range
	Dec.	Hex.		Dec.	Hex.		Dec.	Hex.	
> 2500.0	32767	7FFF	> 3276.6	32767	7FFF	> 2773.2	32767	7FFF	Overflow
2500.0 : 2315.1	25000 : 23151	61A8 : 5A6F	3276.6 : 2786.6	32766 : 27866	7FFE : 6CDA	2773.2 : 2588.3	27732 : 25883	6C54 : 651B	Overrange
2315.0 : 0.0	23150 : 0	5A6E : 0000	2786.5 : 32.0	27865 : 320	6CD9 : 0140	2588.2 : 273.2	25882 : 2732	651A : 0AAC	Nominal range
-0.1 : -120.0	-1 : -1200	FFFF : FB50	31.9 : -184.0	319 : -1840	013F : F8D0	273.1 : 153.2	2731 : 1532	0AAB : 05FC	Underrange
< -120.0	-32768	8000	< -184.0	-32768	8000	< 153.2	-32768	8000	Underflow

Table B- 15 Thermocouple type E

Type E in °C	Values		Type E in °F	Values		Type E in K	Values		Range
	Dec.	Hex.		Dec.	Hex.		Dec.	Hex.	
> 1200.0	32767	7FFF	> 2192.0	32767	7FFF	> 1473.2	32767	7FFF	Overflow
1200.0 : 1000.1	12000 : 10001	2EE0 : 2711	2192.0 : 1832.1	21920 : 18321	55A0 : 4791	1473.2 : 1273.3	14732 : 12733	398C : 31BD	Overrange
1000.0 : -270.0	10000 : -2700	2710 : F574	1832.0 : -454.0	18320 : -4540	4790 : EE44	1273.2 : 3.2	12732 : 32	31BC : 0020	Nominal range
< -270.0	-32768	8000	< -454.0	-32768	8000	< 3.2	-32768	8000	Underflow

Table B- 16 Thermocouple type J

Type J in °C	Values		Type J in °F	Values		Type J in K	Values		Range
	Dec.	Hex.		Dec.	Hex.		Dec.	Hex.	
> 1450.0	32767	7FFF	> 2642.0	32767	7FFF	> 1723.2	32767	7FFF	Overflow
1450.0 : 1200.1	14500 : 12001	38A4 : 2EE1	2642.0 : 2192.1	26420 : 21921	6734 : 55A1	1723.2 : 1473.3	17232 : 14733	4350 : 398D	Overrange
1200.0 : -210.0	12000 : -2100	2EE0 : F7CC	2192.0 : -346.0	21920 : -3460	55A0 : F27C	1473.2 : 63.2	14732 : 632	398C : 0278	Nominal range
< -210.0	-32768	8000	< -346.0	-32768	8000	< 63.2	-32768	8000	Underflow

Table B- 17 Thermocouple type K

Type K in °C	Values		Type K in °F	Values		Type K in K	Values		Range
	Dec.	Hex.		Dec.	Hex.		Dec.	Hex.	
> 1622.0	32767	7FFF	> 2951.6	32767	7FFF	> 1895.2	32767	7FFF	Overflow
1622.0 : 1372.1	16220 : 13721	3F5C : 3599	2951.6 : 2501.7	29516 : 25017	734C : 61B9	1895.2 : 1645.3	18952 : 16453	4A08 : 4045	Overrange
1372.0 : -270.0	13720 : -2700	3598 : F574	2501.6 : -454.0	25016 : -4540	61B8 : EE44	1645.2 : 3.2	16452 : 32	4044 : 0020	Nominal range
< -270.0	-32768	8000	< -454.0	-32768	8000	< 3.2	-32768	8000	Underflow

Table B- 18 Thermocouple type L

Type L in °C	Values		Type L in °F	Values		Type L in K	Values		Range
	Dec.	Hex.		Dec.	Hex.		Dec.	Hex.	
> 1150.0	32767	7FFF	> 2102.0	32767	7FFF	> 1423.2	32767	7FFF	Overflow
1150.0 : 900.1	11500 : 9001	2CEC : 2329	2102.0 : 1652.1	21020 : 16521	521C : 4089	1423.2 : 1173.3	14232 : 11733	3798 : 2DD5	Overrange
900.0 : -200.0	9000 : -2000	2328 : F830	1652.0 : -328.0	16520 : -3280	4088 : F330	1173.2 : 73.2	11732 : 732	2DD4 : 02DC	Nominal range
< -200.0	-32768	8000	< -328.0	-32768	8000	< 73.2	-32768	8000	Underflow

Table B- 19 Thermocouple type N

Type N in °C	Values		Type N in °F	Values		Type N in K	Values		Range
	Dec.	Hex.		Dec.	Hex.		Dec.	Hex.	
> 1550.0	32767	7FFF	> 2822.0	32767	7FFF	> 1823.2	32767	7FFF	Overflow
1550.0 : 1300.1	15500 : 13001	3C8C : 32C9	2822.0 : 2372.1	28220 : 23721	6E3C : 5CA9	1823.2 : 1573.3	18232 : 15733	4738 : 3D75	Overrange
1300.0 : -270.0	13000 : -2700	32C8 : F574	2372.0 : -454.0	23720 : -4540	5CA8 : EE44	1573.2 : 3.2	15732 : 32	3D74 : 0020	Nominal range
< -270.0	-32768	8000	< -454.0	-32768	8000	< 3.2	-32768	8000	Underflow

Table B- 20 Thermocouples R and S

Types R, S in °C	Values		Types R, S in °F	Values		Types R, S in K	Values		Range
	Dec.	Hex.		Dec.	Hex.		Dec.	Hex.	
> 2019.0	32767	7FFF	> 3276.6	32767	7FFF	> 2292.2	32767	7FFF	Overflow
2019.0 : 1769.1	20190 : 17691	4EDE : 451B	3276.6 : 3216.3	32766 : 32163	7FFE : 7DA3	2292.2 : 2042.3	22922 : 20423	598A : 4FC7	Overrange
1769.0 : -50.0	17690 : -500	451A : FE0C	3216.2 : -58.0	32162 : -580	7DA2 : FDBC	2042.2 : 223.2	20422 : 2232	4FC6 : 08B8	Nominal range
-50.1 : -170.0	-501 : -1700	FE0B : F95C	-58.1 : -274.0	-581 : -2740	FDBB : F54C	223.1 : 103.2	2231 : 1032	08B7 : 0408	Underrange
< -170.0	-32768	8000	< -274.0	-32768	8000	< 103.2	< 1032	8000	Underflow

Table B- 21 Thermocouple type T

Type T in °C	Values		Type T in °F	Values		Type T in K	Values		Range
	Dec.	Hex.		Dec.	Hex.		Dec.	Hex.	
> 540.0	32767	7FFF	> 1004.0	32767	7FFF	> 813.2	32767	7FFF	Overflow
540.0 : 400.1	5400 : 4001	1518 : 0FA1	1004.0 : 752.1	10040 : 7521	2738 : 1D61	813.2 : 673.3	8132 : 6733	1FC4 : 1AAD	Overrange
400.0 : -270.0	4000 : -2700	0FA0 : F574	752.0 : -454.0	7520 : -4540	1D60 : EE44	673.2 : 3.2	6732 : 32	1AAC : 0020	Nominal range
< -270.0	-32768	8000	< -454.0	-32768	8000	< 3.2	-32768	8000	Underflow

Table B- 22 Thermocouple type U

Type U in °C	Values		Type U in °F	Values		Type U in K	Values		Range
	Dec.	Hex.		Dec.	Hex.		Dec.	Hex.	
> 850.0	32767	7FFF	> 1562.0	32767	7FFF	> 1123.2	32767	7FFF	Overflow
850.0 : 600.1	8500 : 6001	2134 : 1771	1562.0 : 1112.1	15620 : 11121	2738.0 : 2B71	1123.2 : 873.3	11232 : 8733	2BE0 : 221D	Overrange
600.0 : -200.0	6000 : -2000	1770 : F830	1112.0 : -328.0	11120 : -3280	2B70 : F330	873.2 : 73.2	8732 : 732	221C : 02DC	Nominal range
< -200.0	-32768	8000	< -328.0	-32768	8000	< 73.2	-32768	8000	Underflow

Table B- 23 Thermocouple type TXK (GOST)

Type TXK in °C	Values		Type TXK in °F	Values		Type TXK in K	Values		Range
	Dec.	Hex.		Dec.	Hex.		Dec.	Hex.	
> 1050.0	32767	7FFF	> 1922.0	32767	7FFF	>1323.2	32767	7FFF	Overflow
1050.0 : 800.1	10500 : 8001	2904 : 1F41	1922.0 : 1472.1	19220 : 14721	4B14 : 3981	1323.2 : 1073.3	13232 : 10733	33B0 : 29ED	Overrange
800.0 : 0.0 : -200.0	8000 : 0 : -2000	1F40 : 0000 : F830	1472.0 : 32.0 : -328.0	14720 : 320 : -3280	3980 : 0140 : F330	1073.2 : 273 : 73.2	10732 : 2730 : 732	29EC : 0AAA : 02DC	Nominal range
< -200.0	-32768	8000	< -328.0	-32768	8000	<73.2	-32768	8000	Underflow